R-Link | MediaNav

R-Link
When printing select
pages 2-89

MediaNav
When printing select
pages 90-148

RENAULT

R-Link

RENAULT

Precautions during use GB.3
General information GB.4
General description GB.4
Introduction to the controls GB.5
SD card: use, initialisation GB.13
Operating principles GB.15
Switching on, off GB.18
Add and manage favourites GB.19
Using voice recognition GB.20
Navigation GB.23
Entering a destination GB.23
Volume and voice GB.28
Reading a map GB.29
Guidance GB.30
Preparing a route GB.34
Traffic information GB.35
Displaying the map GB.38
Navigation services GB.39
Z.E. Services GB.41
Recharging station GB.42
Range GB.43
Adding, managing saved addresses GB.44
Navigation settings GB.45
Multimedia GB.47
Listening to the radio GB.47
Media GB.52
Photo reader GB.53
Video playback GB.54
Multimedia settings GB.55

Phone GB.57
Pairing, unpairing a telephone GB.57
Connecting, disconnecting a telephone GB.59
Managing the telephone directory GB.60
Making, receiving a call GB.61
Call log GB.63
During a call GB.64
Telephone settings GB.65
Vehicle GB.66
Eco² driving GB.66
Parking distance control, reversing camera GB.67
Electric vehicle GB.69
Take care GB.71
On-board computer, vehicle settings GB.73
Services GB.74
Introduction to the Services menu GB.74
Downloading and installing applications GB.75
Services settings GB.79
System GB.80
settings GB.80
Operating faults GB.83

PRECAUTIONS DURING USE

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. You must always comply with the laws of the country in which you are travelling.

Precautions when operating the system
– Operate the controls and read the information on the screen only when road conditions allow.
– Set the volume to a reasonable level so that outside noise can be heard.

Precautions regarding navigation
– Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.
– Depending on the geographical area, the map on the SD card may not have the latest information on new roads. Be alert. In all cases, Road Traffic Regulations and road signs always take precedence over the directions of the navigation system.

Precautions concerning the equipment
– Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
– Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
– Do not insert foreign objects or a damaged or dirty SD card into the reader.
– Always clean your screen with a microfibre cloth.
– Use an SD card which is suitable for your navigation system.

The prior acceptance of the General Conditions of Sale is mandatory before using the system.

The description of the models given in this manual is based on the specifications at the time of writing. This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where it is sold. This manual may also contain information about functions to be introduced later in the year.

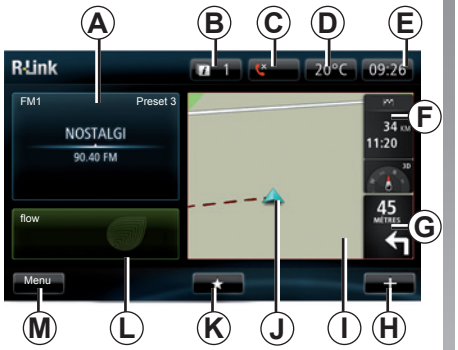

Welcome screen

(depending on the vehicle, the displayed information varies)

A Audio information.

B System notifications.

C Phone menu access/State of connected phone

D Exterior temperature.

E Time.

F Traffic information.

G Instructions for navigation and distance to next change of direction.

H Pop-up menu.

I Navigation map.

J Current vehicle position.

K Favourites.

L Driving Eco² / Energy for electric vehicles.

M Main menu.

Note: You can change the configuration of the welcome screen. Please see the information on “Welcome screen” in the “System settings” section.

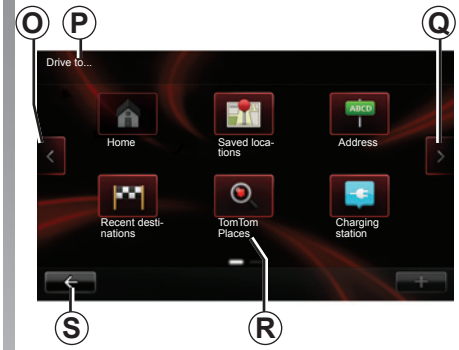

Menu screen

O Go to previous page.

P Name of menu.

Q Go to next page.

R Name of function or of sub-menu.

S Return to previous menu.

INTRODUCTION TO THE CONTROLS (1/8)

Screen controls

	Function
1	From a list: move upwards. From the map: change scale (ZOOM mode).
2	Confirmation button
3	From a list: move down. From the map: change scale (ZOOM mode).
4	Display the welcome screen.
5	Press: on/off Rotate: adjust source volume while listening.

INTRODUCTION TO THE CONTROLS (2/8)

Multimedia panel (optional/depending on the vehicle)

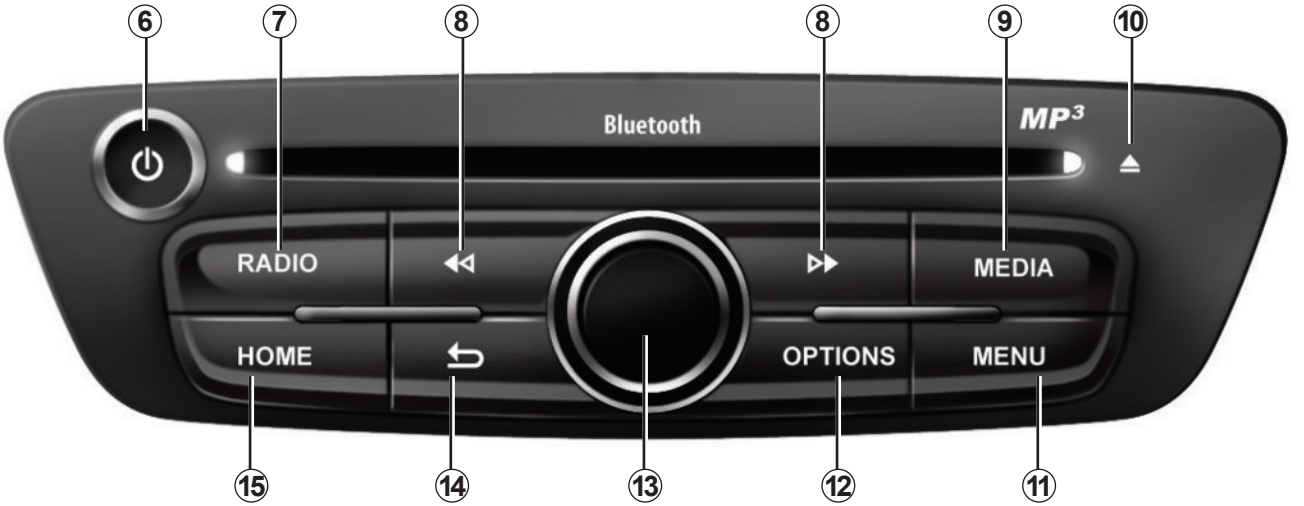

INTRODUCTION TO THE CONTROLS (3/8)

	Function
6	Short press: on/off Rotate: adjust the volume of the source currently in use.
7	Listen to the radio/change band.
8	Change a CD track or playlist.
9	Choose an external source.
10	Eject a CD.
11	Go to the main menu.
12	Open the pop-up menu.
13	Switching: – moving around the card; – up/down: move to different areas of the screen (upper bar, central zone, lower bar); – left/right: move to different parts of a menu. Rotate: – move around the various elements of a zone; – modify the scale (ZOOM mode). Press: – confirm.
14	Go back to the previous menu.
15	Go to the welcome screen.

INTRODUCTION TO THE CONTROLS (4/8)

Radio panels (depending on the vehicle)

For more functions, please refer to the description of the central control.

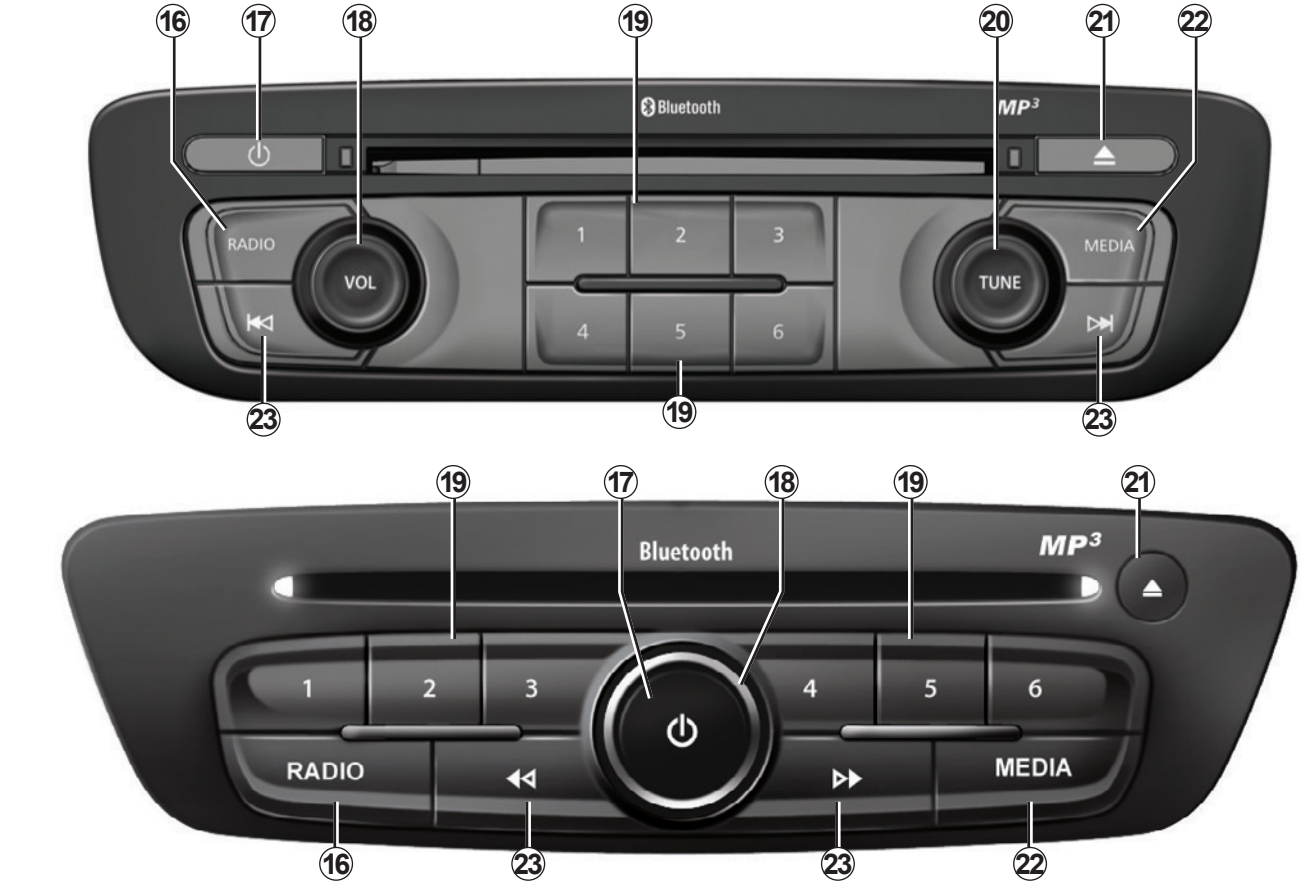

INTRODUCTION TO THE CONTROLS (5/8)

	Function
16	Listen to the radio/change band.
17	On/off
18	Rotate: adjust the volume of the source currently in use.
19	Short press: recall a stored radio station. Long press: store a radio station.
20	Rotate: search for radio stations, change tracks on a CD (depending on the country).
21	Eject a CD.
22	Choose an external source.
23	Short press: change a CD track or playlist.

INTRODUCTION TO THE CONTROLS (6/8)

Steering column control

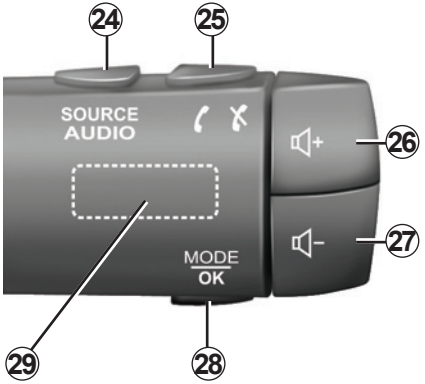

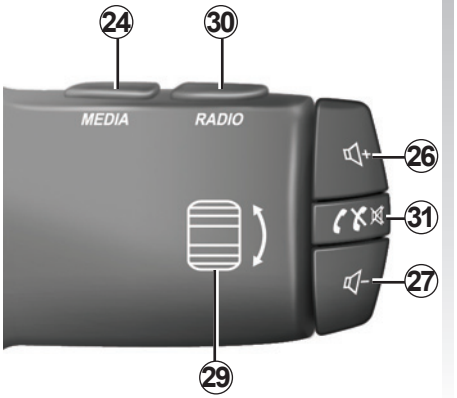

	Function
24	Select the audio source.
25	Answer/end a call (phone mode)
26	Increase the volume of the source currently in use.
27	Decrease the volume of the source currently in use.
26+27	Radio mute on/off. Pause/play an audio track.
28	Change radio mode (preset/list/frequency) (depending on the vehicle).
29	Search for radio stations/change track or audio file.
30	Change radio band (AM/FM1/FM2/DR1/DR2).
31	Short press: – mute on/off; – answer/end a call (phone mode)

Control on the steering wheel with voice command

	Function
32	Select the audio source.
33	Change radio band (AM/FM1/FM2/DR1/DR2).
34	Increase the volume of the source currently in use.
35	Short press: – answer/end a call (phone mode); – mute on/off.
36	Decrease the volume of the source currently in use.
37	Rotate: search for radio stations/change track or audio file. Press: change radio mode (preset/list/frequency).
38	Activate/deactivate voice recognition (depending on the vehicle).

INTRODUCTION TO THE CONTROLS (8/8)

Central control

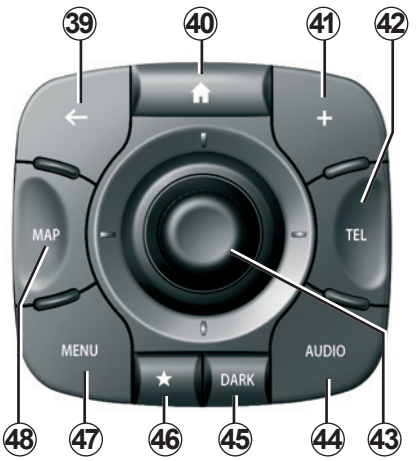

	Function
39	Go back to the previous menu.
40	Go to the welcome screen.
41	Open the pop-up menu.
42	Access the telephone menu
43	Switching: – move around the map or in a menu/page; – up/down: move around the various areas of a menu (upper bar, central zone, lower bar); Rotate: – move around the various elements of a zone; – move around a list; – modify the scale (ZOOM mode). Press: – confirm.
44	Open the source screen while listening (radio, audio CD, etc).
45	Activate the standby screen to hide the map.
46	Access favourites
47	Go to the main menu.
48	Access the navigation page.

SD CARD: USE, INITIALISATION (1/2)

SD card

A SD card is supplied with the navigation system. Amongst other things, this includes maps for your country or set of countries.
Updates (especially of maps) are published regularly. They are **only** available for download by inserting the SD card of your navigation system into your computer's SD port, **online** at the "R-Link Store".

Upon delivery of your new vehicle, you have a maximum of 60 days to update your maps free of charge. Beyond this time, updates will become paid.

Only use your SD card for operating and updating your navigation system. Do not insert any other device (camera, portable GPS, etc.), or in another vehicle.

You can also download maps covering more countries than your original map (e.g. Western Europe).

Only use an SD card which is compatible with your vehicle's navigation system.

SD CARD: USE, INITIALISATION (2/2)

Inserting the SD card

With the ignition off, insert the SD card in the SD ***1*** port of your vehicle.

An SD card is fragile:
– do not bend it;
– insert it correctly;
– do not force insertion.

Removing the SD card

From the main menu, press “System”, then “Remove SD card” to eject the SD card safely.

To remove the SD card from the SD ***1*** port, press the card, then release it. The card will jut out of the slot by a few millimetres. Pull the card to remove it completely.

For safety reasons, carry out these operations when the vehicle is stationary.

Touchscreen *1*

Navigating a menu

The touchscreen ***1*** grants access to the system functions. Touch the touchscreen ***1*** to scroll through the pages and open a menu.

Note: depending on the vehicle, usage of the touchscreen may be restricted while the vehicle is moving.

Confirming/cancelling a selection

Always confirm a change of settings by pressing the “Done” button.

Screen controls

Navigating a menu

Press ***3*** to enter a menu. Use the ***2*** buttons to scroll through telephone contacts, radio stations, etc.

Confirming/cancelling a selection

Press ***4*** to go back to the welcome screen.

For safety reasons, carry out these operations when the vehicle is stationary.

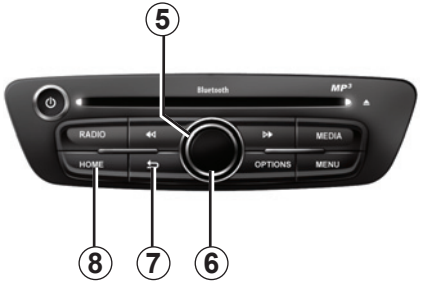

Multimedia screen

Navigating a menu

Use the rotating control ***5*** to move from menu to menu. Confirm by pressing the central ***6*** button to enter the menu.

Confirming/cancelling a selection

Press the central button ***6*** to confirm a change.

Press the ***7*** button to cancel a choice and return to the previous menu.

Press the ***8*** button to go back to the welcome screen.

Central control

Navigating a menu

Use the joystick ***11*** to move from menu to menu:

– Move the joystick ***11*** up or down to move around the different areas of the screen (upper bar, central zone, lower bar);

– turn the joystick ***11*** to move between different elements of a zone;

– press the joystick ***11*** to open the selected element;

– in the tabs menus, move the joystick ***11*** left or right to switch from one tab to another.

Confirming/cancelling a selection

Press the joystick ***11*** to confirm a change.

Press the ***9*** button to cancel a choice and return to the previous menu.

Press the ***10*** button to go back to the welcome screen.

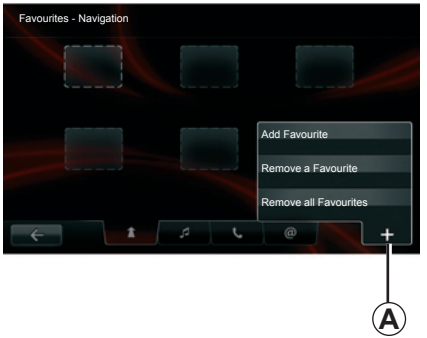

Pop-up menus

Available in most system menus, the pop-up menu ***A*** lets you quickly access current page functions.

For safety reasons, carry out these operations when the vehicle is stationary.

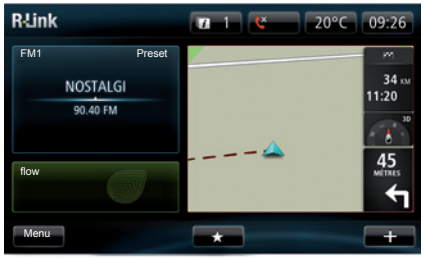

Introduction to the welcome screen

The welcome screen is the default screen for your multimedia system. It is made up of a certain number of shortcuts to other functions, such as navigation and radio.

For a description of the welcome screen, please refer to the “General description” section.

Note: You can change the configuration of the welcome screen. Please see the information on “Welcome screen” in the “System settings” section.

Introduction to the main menu

To access the main menu, press “Menu” from the welcome screen.

The system is made up of six major sections, all of which can be accessed from the main menu:

Navigation

This function includes all the satellite navigation features, road maps, traffic information, LIVE services and warning areas (depending on the country).

Multimedia

This function enables management of the radio, and audio and video playback.

Phone

This function is used to pair the system with a mobile phone and to use the hands-free mode.

Vehicle

This function includes management of equipment such as the reversing camera (depending on the vehicle), on-board computer and Driving Eco², and some electric vehicle items.

Services

This function includes the R-Link Store and the applications.

System

This function is for adjusting various settings on the multimedia system, e.g. display, language, date and time.

Switching on

The multimedia system switches on automatically when the ignition is switched on. In other cases, press the start/stop button .

At start-up, the system displays a safety screen to show you the state of data sharing if connected. This screen lets you set certain functions:

– Press “Change settings” ***1*** to authorise or reject data sharing.
– Press “Language” ***3*** to change the system language.
– Press “Done” ***2*** to begin using the multimedia system.

Switching off

With the ignition off, the system is deactivated automatically when the driver’s door is opened.

With the ignition on, press the audio system on/off button .

Resetting the system

To reset all the system settings and/or delete all personal data, select “System” from main menu, then “Restore factory settings” and follow the on-screen instructions.

Note: Resetting the system means deleting all the applications.

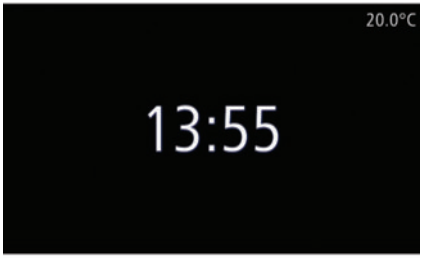

Clock/temperature screen (depending on the vehicle)

This screen is displayed when the driver’s door is opened, before the ignition is switched on.

It is displayed when the system is stopped: with the ignition on, press the audio system on/off button . The system then stops the guidance and displays the clock and temperature.

ADD, MANAGE FAVOURITES

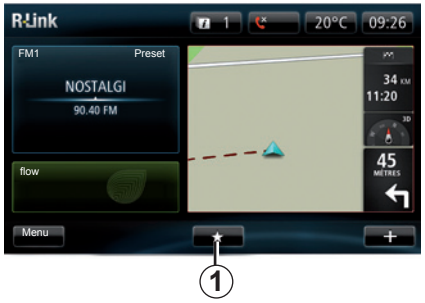

Add favourites

From the main screen, press ***1***. The Favourites menu enables you to manage four types of favourites:

– Navigation ***2***;
– Radio ***3***;
– Telephone ***4***;
– Applications ***5***.

For safety reasons, carry out these operations when the vehicle is stationary.

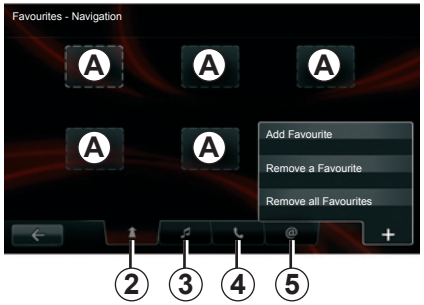

Add a navigation favourite *2*
Select the first empty slot ***A*** or "**+**", then "Add Favourite". Choose the favourite from the list to add a saved destination to the favourites.
Note: to add a navigation favourite, you must first save an address in the memory. Please refer to the information on "Confirming a destination" in the section on "Entering a destination".

Adding a favourite radio station *3*
Select an empty slot ***A*** or "**+**", then "Add Favourite". Choose the favourite from the list to add a preset radio (FM only) to the favourites.

Add a telephone favourite *4*
Select an empty slot ***A*** or "**+**", then "Add Favourite". Choose the favourite from the list to add a contact. Please refer to the "Managing the phonebook" section for further information.
Note: A contact added as favourite remains visible to any user of the vehicle, whichever phone is connected.

Adding an applications favourite *5*
Select an empty slot ***A*** or "**+**", then "Add Favourite". Choose the favourite from the list to add an installed application to the favourites.

Delete favourites

To delete a favourite, press "**+**", then select the favourite and press "Remove a Favourite". A confirmation message is displayed, press "Delete" to confirm. You can delete all favourites by pressing "**+**", then "Remove all Favourites". A confirmation message is displayed, press "Delete" to confirm the deletion.

Voice recognition system (depending on the vehicle)

Your multimedia system has a voice recognition system for controlling some functions with your voice. This enables you to use your multimedia system while keeping your hands on the steering wheel.

Activation

To activate the voice recognition system, press the voice recognition button in your vehicle. The touchscreen will display the main voice control menu.

From the main voice control menu, you can use the voice command to control three functions:

– navigation;
– telephone;
– installed applications.

Note: The position of the voice recognition button varies depending on the vehicle (steering wheel or column controls). To find out more, please see your driver's handbook.

Voice recognition indicator *1*

The voice recognition indicator ***1*** is made up of colour markers and a central icon.

Colour markers

The colour markers are used to optimise voice recognition:

– green marker: optimal voice recognition;
– orange marker: good voice recognition;
– red marker: average voice recognition.

Central icon

Depending on the system status, different central icons can be displayed:

– Microphone icon: the system is ready to receive your voice command;
– Loading icon: the system is loading data;
– Loudspeaker icon: the system is giving you information through its synthetic voice.

Controlling navigation with voice recognition

You can enter a navigation address by the voice control integrated to your audio system. To do this:

– press the voice control button to display the main voice control menu;

– when the system beeps, say “Destination”;

– say “Address” then give the full destination address (number, street name, destination town/city);

– the system will give you the address it has understood - confirm your destination to begin guidance.

Note: speak loudly and clearly. Use the voice recognition indicator to optimise voice recognition.

Note: You can also enter an address or recent destination from the voice control main menu. To do this, press the voice control button, then say “Address” or “Recent destinations”, and give an address or select your destination.

Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

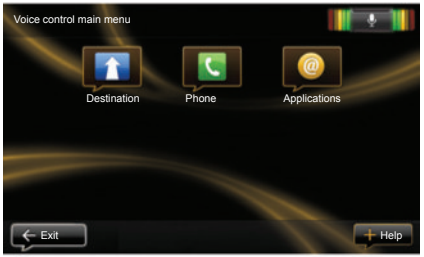

Using a telephone with voice recognition

You can call a number using the voice control integrated to your audio system. To do this:

– press the voice control button to display the main voice control menu;
– when the system beeps, say “Phone”;
– say the name of the contact you wish to call, or say the telephone number you wish to contact;

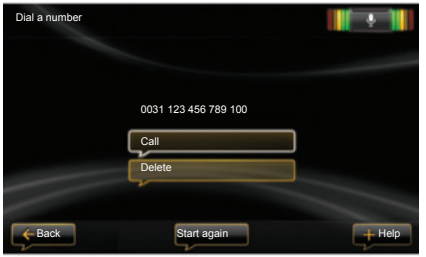

Note: it is recommended to say the numbers one by one.

– the system will show the number given, say “Call” to call the number or “Delete” to give another number.

Note: You can also call a saved contact or a number from the main voice control menu. To do this, press the voice control button then say the name of your contact or the number you want to call.

Launch an application using voice recognition

You can launch an application by the voice control integrated to your audio system. To do this:

– press the voice control button to display the main voice control menu;
– when the system beeps, say “Applications”;
– say the application name you wish to launch to begin using it immediately.

Note: You can also run the R-Link store application from the voice control main menu. To do this, press the voice control button and say “run the R-Link store application”.

Note: You can say the contact’s name or their number directly from the main page. To cut off the synthetic voice during playback of the contact’s name or phone number, press the mute button on the steering column control.

ENTERING A DESTINATION (1/5)

Navigation menu

From the main menu, press “Navigation”.

From the “Navigation” menu, press the button “Drive to...” to enter your destination.

Menu “Drive to...”

This menu offers several ways to enter a destination:

– enter an address from the “Address” section using one of the following methods:
  – enter a full address (town/city, street and number);
  – search by postcode;
  – select a City centre;
  – select a crossing or junction;
– select a “Home”;
– select an address from the “Saved locations”;
– select a destination from the “Recent destinations”;
– select a destination by “TomTom Places”;
– select a destination by “Charging station” (electric vehicle);
– select an address from a “Point of Interest” (POI);
– select a “Point on map”;
– select a “Latitude” and a “Longitude”.

“Home”

This menu can be used to start navigating your way home.
To store the address of your home location, use “Settings” menu, then “Change home location”.

“Saved locations”

The “Saved locations” section contains the favourite stored destinations such as your place of work, etc.

– Select the “Drive to...” section from the “Navigation” menu;
– Choose “Saved locations” and confirm;
– Select the required destination address in the list of stored addresses to start guidance.

You can manage your saved addresses in the “Settings” menu, then select “Manage saved locations”.

Note: The “Saved locations” icon is for accessing saved addresses and the “**+**” button is for adding addresses as required.

For safety reasons, carry out these operations when the vehicle is stationary.

ENTERING A DESTINATION (2/5)

Enter an “Address”

This section enables you to enter a full or partial address: country, town, street and number.
On first use, the system asks you to choose the destination country.

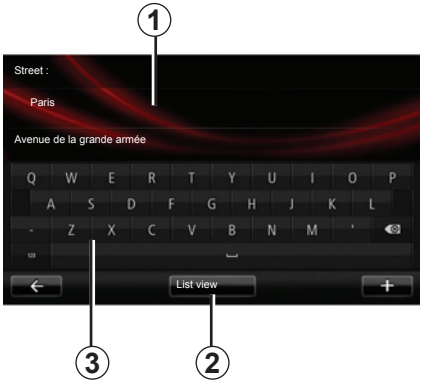

Depending on the various version, you can enter the name of the desired town or its postcode using the keypad ***3***. The system may suggest several town names in the area ***1***.

– Press on the name of the town/city displayed to confirm.
– Access the full list corresponding to your search by selecting “List” ***2***.
– Select the town or city.
– Do the same actions for the “Street” and “House number” fields.

Note: The system will store the last towns/cities entered in its memory. You may directly select one of these towns by pressing the ***1*** zone.

Note: only addresses known to the system through the digital map are authorised.

For safety reasons, carry out these operations when the vehicle is stationary.

“Recent destinations”

This item enables you to select a destination from the list of addresses last used.

These are automatically stored.

– Select the “Navigation” section from the “Drive to...” menu, then choose “Recent destinations”.
– From the list of stored destinations, select an address to begin guidance.

ENTERING A DESTINATION (3/5)

“TomTom Places”

This service enables you to quickly search for a Point of Interest using a key word, and to make that location a destination.

– Select the “Navigation” section from the “Drive to...” menu, then choose “TomTom Places”.

– Enter a keyword using the touchpad, then confirm.

– From the list of elements found, select an address to begin guidance.

Note: this icon is only displayed if you have a subscription in the country where the LIVE Services are available (please see the section on “Navigation Services” in this document).

“Charging station”

Depending on the vehicle, this menu enables you to find a recharging station for your electric vehicle and to plan your route to this location.

Note: You can manage your personal stations in the “EV settings” menu. Please refer to the “Navigation settings” section.

Note: Personal recharging stations are stored in the navigation system, whereas the generic list of recharging stations is stored on the SD card.

Only the list on the map SD can be updated and only the personal recharging stations can be managed from the navigation system.

“Point of Interest ” (POI)

A point of interest (POI) is a service, establishment or even a tourist area close to a location (start point, destination city, en route, etc.).

POIs are classed in different categories, e.g. restaurants, museums, car parks, etc.

There are several options to find a point of interest:

– category;

– the name of the desired POI.

Select the “Drive to...” section from the Navigation menu, then “Point of Interest” and confirm.

Search by POI category

– Select the “Navigation” section from the “Drive to...” menu, then choose “Point of Interest”.

– Select the search area: “POI nearby”, “In town” or “Near Home”.

– Select your desired category type.

Then enter a town name and launch the search by selecting “Done”.

Search by POI name

Enter the name of a POI you want to find. The system will start the search automatically.

“Point on map”

This function allows you to define a destination from the map. From the Navigation menu, select “Drive to...”, then “Point on map”.

Move around the map to position the cursor on your destination, then confirm: the system calculates the route.

“Latitude Longitude”

This function allows you to define a destination using latitude and longitude values.

For safety reasons, carry out these operations when the vehicle is stationary.

Confirming the destination

Once the destination information has been entered, the system displays a route summary for confirmation. Once you have confirmed the route, the system will calculate the itinerary. By default, the calculation is done by selecting the fastest route.

Note: The calculation criterion can be changed in the settings.

At the end of the calculation, the system displays the navigation summary and suggests two options:

– “**+**” enables you to see details of the journey in various forms (refer to the information on “Route information” in the “Guidance” section) - change itinerary and save itinerary.

– “Done” activates guidance.

Note: if you do not confirm, this page will close after ten seconds and guidance will start automatically.

Note: depending on the vehicle and charge level, if you can reach your destination, guidance is launched – if the charge level is too low, the system offers to search for a recharging terminal on the way.

Note: “ IQ Routes™” is a function which optimises the journey time using statistical data and calculates routes based on the average traffic levels on that day and time. To activate or deactivate this function, refer to the “Navigation settings” section.

Latest map guarantee

After delivery of your new vehicle you have about 60 days in which to update the map free of charge.
Once this time has elapsed, you will need to pay for updates.
For more information, please see an Authorised Dealer.

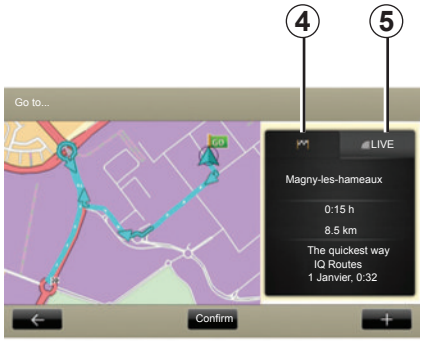

Summary of selected route

The summary is displayed after calculation of the route and the selection of a destination.
The screen has two tabs:

– the journey tab ***4*** enables a summary of your route to be displayed;
– the Live ***5*** tab displays traffic information in real time (subject to subscription).

Note: press one of the tabs to view its content.

Depending on the vehicle, the map shows the part of the journey that can be completed in green, and the part of the journey that cannot be completed without recharging in red.

If your vehicle charge level is high enough, a chequered flag is displayed in the journey tab ***4***.
If your vehicle charge level is too low, a chequered flag with a lightning symbol on a red background is displayed in the journey tab ***4***.

Volume

Changing the volume

To change the audio volume, use the audio system volume control during a voice instruction or the “System” menu, “Sound settings” then “Sound levels” and adjust the following audio volumes:

– main volume;
– navigation instructions;
– hands-free telephone;
– telephone ringtone;
– voice message;
– application sounds;
– traffic announcements.

Press “Done” to save the audio volumes.

Selecting a voice

Your system allows you to select either a synthesised or a recorded human voice.

This voice is used to give the voice instructions.

To change the voice used on your navigation system, go to the main menu and select “Navigation”, “Settings” and “Voice”.

Select a voice from the list.

Playback

Playback is generated by your navigation system. It gives verbal instructions while you are driving. It can give road directions (e.g. turn right) and traffic sign information.

Note: Voice recognition only operates with playback.

Recorded human voices

Recorded human voices are voices recorded by an actor (male or female).

Note: human voices only give you simplified guidance instructions.

READING A MAP

Map key

A Sign giving the speed limit (the speed given depends on the unit chosen). Please refer to the “System settings” section for more information on the choice of units.
Note: the sign turns red and flashes if you drive faster than the speed limit

B Zoom, touch the magnifying glass to display the zoom in and out buttons.

C Name of the next main road or road sign information, if applicable.

D Outside air quality (depending on the vehicle).

E Telephone information.

F Outside temperature (Weather).

G Current time.

H Pop-up menu.

I Distance to and indication of next turning / Adjustment of guidance instruction volume.

J Audio system information.

K Current vehicle position.

L Back to previous page.

M Traffic information bar: displays incidents on the route, traffic info reception indicator, access to traffic map.

N Journey information such as arrival time, total distance remaining and whether you will reach your destination (chequered flag or chequered with lightning symbol on red background)/Journey summary

O Compass/ 2D/3D mode.

Note: Access to the full navigation page is only possible from the “Navigation” tab on the main menu.

Map colours

You can change the colours on the map: from the main menu select “Navigation”, “Settings” then “Change map colours”.

Map icons

The navigation system uses ***Q*** symbols to display points of interest (POI).

Recharging stations

(electric vehicle)
The navigation system uses the ***P*** symbol to display recharging stations.

Lane images

When approaching a road change (on major roads), the system may switch to “Show lane images” mode: an 3D image provides a close-up view of the junction with a turn arrow and road signs.

To deactivate lane images, please refer to the information on “Advanced Settings” in the section on “Navigation settings”.

Guidance screens

Intersection map

During guidance, before each change of direction, the system will gradually zoom into the junction.
To deactivate automatic zoom, please refer to “Advanced” in the “Navigation settings” section.

Guidance Voice

During guidance, before each turning, the system will give voice instructions.

To deactivate or reactivate voice guidance, please refer to the “Navigation settings” section.

Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

Route details

This function allows you to view your route before guidance begins. Press the "**+**" button, then "Route details" after entering a destination.
The following choices will be available:
– "Display instructions";
– "Display route map";
– "Display route demo";
– "Route summary";
– "Display destination";
– "Display traffic on route".

"Display instructions"

This function makes it possible to view the route plan.

Several details of the route will appear:
– direction-change arrow;
– road types;
– road names;
– miles/kilometres before a fork in the road.

"Display route map"

This function makes it possible to view the map of the route.

"Display route demo"

This function makes it possible to view a demonstration of the route.



"Route summary"

This function is used to return to the previous screen. The details of the journey time, the miles and the type of journey ("IQ Routes™" activated/deactivated) are displayed.

Note: to directly access this page from the navigation map, press the information block set for your trip.



"Display destination"

This function lets you see changes in direction as an image.

"Display traffic on route"

This function gives you an overview of all the traffic incidents affecting your journey.

Change route

To modify your route, from the “Navigation” menu, select “Change route” then one of the suggested options.

Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

“Calculate alternative”

Select this menu to make the system stop the current guidance.

To start guidance again, select “Go to...” then “Recent destinations”.

“Cancel route”

Select this menu to make the system stop the current guidance.

To start guidance again, select “Go to...” then “Recent destinations”.

“Travel via”

Select this menu to change your route so that it passes by a particular location, to pick someone up on the way, for example. You choose the location you want to pass in the same way as you choose a destination.

You have the same set of options: Address, Saved addresses, Point of Interest and Point on the map.

Your system will calculate a new route to your destination that passes the location you chose.

GUIDANCE (4/4)

“Avoid roadblock”

Select this menu if you see a roadblock or a line of traffic ahead which was not indicated by the “Traffic info” service.

You then have to choose how much of the route ahead you want to avoid.

Choose among these different options: “100 metres”, “500 metres”, “2,000 metres”, “5,000 metres”.

Your system will recalculate your route avoiding the section of the route for the distance you selected.

“Avoid part of route”

Select this menu to avoid a part of the route. Use this option if you see that your route includes a road or a junction that you wish to avoid. Then choose the road that you wish to avoid from the list of roads on your route.

“Minimise delays”

Select this menu for your to plan your route based on the latest traffic information.

Itinerary with waypoints

To add a stage in your route, press button “Navigation” in the main menu, then “Change route” and “Travel via”, then enter the stage address.

The system calculates the route taking the detour into account.

Note: you can add several waypoints to your route.

Planning a route in advance

You can use the navigation system to plan a journey in advance.

To do this, select at least three points, including the starting point, one or more points en route and your destination.

For example, to find out how long a journey is going to take before you start, or to check the route of a journey you are planning.

To plan a route:

– from the main menu, select “Navigation”, then “Itineraries”;

– select a point of departure, just as you would for a destination;

– select one or more points en route;

– select an arrival point;

– With the route entered, save it, then start the journey by pressing “**+**”, then “Go”. The system plans the route and allows you to view the details.

Traffic Information Service

Traffic information is a service available on your navigation system which lets you receive up-to-date traffic information coming from the best local sources.

The “Traffic” service uses TMC information transmitted over FM wavebands.

The “HD Traffic™” service uses LIVE Services information.

These services show events in the form of dots on the map.

It covers the main roads and is updated regularly.

Note: The menu title is “Traffic” or “HD Traffic™”, depending on the country.

Traffic Information Service Options

“Minimise delays”

Select this option to alter your journey based on the latest traffic information.

“Display traffic on route”

Select this menu to see an overview of all traffic incidents on your route. Press the icon for an incident to get more detailed information.

“Explore map”

This menu enables you to explore the map and keep up-to-date with the traffic situation in your area. To access the map, from the main menu, select the Traffic Information service then “Browse map”.

The map displays the last searched location. Press the icon for an incident to get more detailed information.

“Read traffic information aloud during the route”

This menu enables you to activate the audio reading of traffic information.

Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

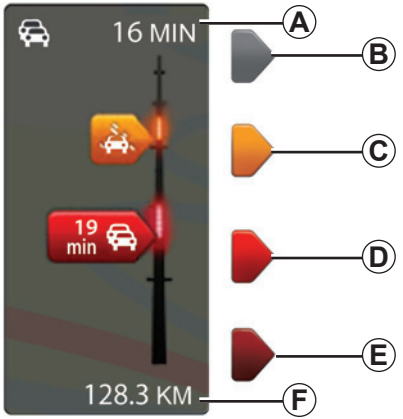

Traffic bar

The traffic bar is available for the Traffic Information services.

The side traffic bar displayed in guidance mode, shows the latest traffic information for your route.

Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

Traffic display

The navigation system indicates traffic incidents:

– by displaying symbols on the map (list of icons at the end of the section);
– with voice messages if the route is recalculated.

Depending on the operating status of the Traffic Information service, the following icons are displayed on the traffic sidebar:

A Heavy delays on the route;
B Unknown or indeterminate situation;
C Slowdown;
D Traffic jam;
E Stationary traffic or road closed;
F Distance before next incident.

“HD Traffic™” service options.

Available on subscription, the “HD Traffic™” service offers more frequent updates (every 3 minutes), covering main and secondary roads.

TRAFFIC INFORMATION (3/3)

“Traffic preferences”

To access this menu, from the Traffic Information Services menu, press “Traffic Settings”.

You can automatically minimise delays after every traffic update.

To select your preference, tick the box to the right of your choice using the central confirmation button.
Once you have made your choice, select “Done”.

Symbol	Meaning
	Accident
	Traffic jams
	One or more closed roads
	Road closed
	Traffic incident
	Road works

Symbol	Meaning
	Heavy rain
	Snow
	Strong wind, storm
	Fog
	Ice

VIEW MAP

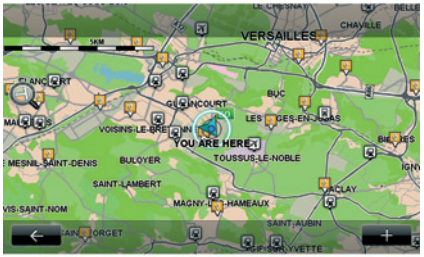

To access the map explorer, from the main menu, press “Navigation” then select “View map”. To move around the map, use the touchscreen or the central control on equipped vehicles.

Pop-up menu “+”

Press “+” to access the following menus:

– use this location to...;
– Find;
– change the map details;
– Add to saved locations.

“Use this location to...”

This menu enables the selected position to be used to:

– centre the map on the vehicle’s location;
– navigate to a point on the map;
– search for a point on the map;
– add a point on the map to the favourites;
– add a point on the map to the POI;
– correct the position of your vehicle.

“Find”

This menu allows you to centre the map on:

– your home;
– a saved address;
– an address;
– a recent destination;
– TomTom Places;
– a recharging station search;
– a point of interest;
– your position;
– latitude and longitude.

“Change the map details”

This menu enables the activation/deactivation of map settings such as:

– traffic;
– names;
– points of interest;
– charging stations for your electric vehicle;
– the satellite image map background;
– the GPS coordinates.

“Add to saved locations”

This menu lets you add the position selected on the map to the saved addresses.

Give your Favourite a name that is easy to remember. You navigation system will always suggest a name - usually a favourite address. To enter a name, just begin typing on the touchscreen.

For safety reasons, carry out these operations when the vehicle is stationary.

NAVIGATION SERVICES (1/2)

Your system includes navigation services. You can add to these services by subscribing to paid TomTom LIVE services.

– The navigation services include traffic information and the location of fixed speed cameras, depending on local laws.
– The LIVE services (paid, subscription) include traffic information, the locations and updates for fixed and mobile speed cameras, TomTom Places and the weather.

Note: The HD Traffic™ service is called “Traffic” if the subscription to LIVE services is not activated.
A trial period for LIVE services is offered. At the end of the trial period, you can extend your subscription to LIVE services on the MyRenault website.

A current subscription is required to access LIVE services. The content of the LIVE services will vary depending on the country.

Accessing the navigation services

To access the navigation services:

– from the main menu, press “Navigation”;
– select “Navigation services”.

HD Traffic

Please refer to the “Traffic Information” section.

In certain countries it is illegal to download and activate the camera warning option and this could lead to prosecution.

Speed Cameras

This service includes the location of mobile safety cameras in real time, accident blackspots and fixed safety cameras.

The latest updates for speed cameras are installed automatically if a LIVE subscription is valid.

“Speed Cameras” shows mobile speed camera alerts as well as fixed speed camera alerts. Information is obtained in real time using information from other users.

You can deactivate this function by going to the “Speed Cameras” menu for LIVE services.

Note: for mobile speed cameras, information is provided when a member of the community sends the information to the database.

Note: Depending on the country and local restrictions, speed cameras may not be displayed.

NAVIGATION SERVICES (2/2)

“TomTom Places”

The “TomTom Places” service lets you quickly search for any point of interest using a keyword and make it a destination.

"Mon TomTom LIVE"

This service enables users to view the expiry date of the subscribed services. Users can renew their subscriptions from R-Link Store or from the website MyRenault by selecting one of the services.

You must enter a valid e-mail address for this service. An e-mail detailing the subscription methods for the chosen services will be sent to this address. For further information, please refer to the section on “Downloading and installing applications”.

Note: The availability of LIVE services varies depending on the country. To find out more about service availability in your country, please see an authorised dealer.

“Weather”

The weather service provides five-day weather forecasts for the location of your choice.

“Services Z.E.”

The Services Z.E. are reserved for electric vehicles. Read the “Services Z.E.” section for further details.

SERVICES Z.E.

The Services Z.E. are only available on electric vehicles.

They include on-board vehicle services and other services accessible from outside the vehicle (mobile phone and Internet).

They enable you to determine, inter alia, the charge status of your vehicle, using mobile phones or your computer. This information is also available directly on the instrument panel of your vehicle.

For further information, please contact an Authorised Dealer of brand.

Accessing the Services Z.E.

To access the Services Z.E.:

– from the main menu, press “Navigation”;
– select “Navigation services”;
– select “Services Z.E.”.

“Search by availability”

This option gives you access to a list of the nearest recharging stations with at least one recharging terminal available.

“E.V. Services guided tour”

This menu gives access to a series of tutorials explaining the Services Z.E. and functions relating to electric vehicles. You can press the “Suivant” button to move to the next screen, or the “Précédent” button to return to the previous screen.

RECHARGING STATION

The “Charging station” menu is only available on electric vehicles.

Go to the Recharging station menu

To access the “Charging station” menu:
– press “Navigation”, then select “Drive to... ”;
– in the “Drive to...” menu, select “Charging station”.

“Near my location”

This option enables you to find the recharging stations closest to your current position.

“In city”

Select this service to find recharging stations in the town/city your are visiting.

“Near Home”

This option provides a list of recharging stations close to your home.

“Along route”

This option shows a list of recharging stations that you can use during your trip.

“Near destination”

This option gives a list of recharging stations near your destination.

“Last recharging station”

This option enables you to find the coordinates of the last recharging station used.

Saving new recharging stations

When you recharge your vehicle at a new recharging terminal, it will be automatically saved in the system.

You can also create and manage your own recharging stations in the “Settings” menu, by selecting “EV settings”. Please refer to the “Navigation settings” section.

RANGE

The range distance is only available for electric vehicles.

Attainability of the destination

The classic map display indicates whether the battery level of your electric vehicle is sufficient to reach your destination:

– chequered flag: the vehicle can reach your destination at the current battery level;

– chequered flag with lightning symbol on red background: look for a recharging station to avoid running out of power.

Range view

– In guidance mode, from the route summary screen: you can see the route portions (zones) that are attainable (in green) and non-attainable (in red);

– when not in guidance mode, from the “attainable zone” main menu: your range distance is shown as a radious around your vehicle’s current position.

Low battery warning

When the charge level reaches the minimum alert level on the instrument panel, the system automatically proposes a list of recharging stations near your current location.

Deactivating the low battery warning

This option enables you to deactivate the automatic proposal of recharging stations when the battery level is low:

– from the “Navigation” menu, select “Settings” then “EV settings”.
– select the “Disable low battery warning” option.

Select this option again to reactivate the low battery alert.

Note: if the ongoing guidance is indicating an attainable charging point, the low battery alert will not be triggered.

ADDING, MANAGING SAVED ADDRESSES

Accessing saved addresses

To access saved addresses, from the main menu press “Navigation”, then “Drive to...”, then “Saved locations”.

Save an address from a recent destination

– In the “Drive to...” menu, select “Recent destinations”;
– select the recent destination you wish to save;
– on the screen/map, press “**+**” then “Add to saved locations”;
– give a name to an address, then press “Next”;
– If the “Home” address is not registered, the system asks if the saved address is your home, select “Yes” or “No”. A message confirms that the address has been saved.
– If the “Home” address is registered, the system offers to select this address.

Renaming a saved address

– From the main menu, press “Navigation” then “Settings” then “Manage saved locations”;
– select an address saved in the memory that you wish to remember;
– on the screen/map, press “Rename”;
– enter the new name for the saved address, then press “Next” to confirm.

Deleting a saved address

– From the “Manage saved locations” menu, select the saved address you wish to delete;
– on the screen/map, press “Delete”;
– a message asks you to confirm the deletion - press “Yes” to confirm or “No” to cancel.

NAVIGATION SETTINGS (1/2)

Accessing the navigation settings

From the “Navigation” menu, press “Settings”, then select the element you wish to change:

– Turn off voice guidance;
– Route planning;
– Show POI on map;
– Manage POIs;
– Voice;
– EV settings;
– Set home location;
– Manage saved locations;
– Switch map;
– Change map colours;
– Car symbol;
– Advanced (Settings).

Turn off voice guidance

This menu enables you to activate or deactivate voice guidance.

Route planning

This menu allows you to define your preferences for:

Type of journey

Select a journey type. The recommended journey criterion is “Quickest”.

“IQ Routes™"

After selecting the journey criterion, the system lets you activate/deactivate the “IQ Routes™” function.

The “IQ Routes™” function finds the best route according to estimated average traffic and actual speeds measured on the roads.

High-occupancy vehicle lanes

High-occupancy vehicle lanes are routes that favour your vehicle’s energy savings.

Show POI on map

This menu lets you display or hide Point of Interest (POI) categories on the map.

Manage POIs

A point of interest (POI) is a service, establishment or tourist area close to a location (start point, destination city, en route, etc.). POIs are classed in different categories, e.g. restaurants, museums, car parks, etc. There are several options to find a point of interest:
– category;
– the name of the desired POI.
This menu allows you to add, change or delete POIs or POI categories.

Voice

This menu lets you choose the synthetic or stored voice.

NAVIGATION SETTINGS (2/2)

EV settings

This menu allows you to create and manage your own recharging stations as well as those detected automatically by the system.

Set home location

This menu lets you set or change your home address.

Manage saved locations

This menu lets you add, delete or rename your saved addresses.

Switch map

Use this menu if you are installing more than one map saved on your card SD. To change maps, select “Switch map”, then select the map required.

Change map colours

Select “Change map colours”, then choose the day and night colours you want. You can download new colours.

Car symbol

This menu allows you to change the vehicle icon on the navigation map 3D.

Advanced

This menu enables you to change the following advanced settings:

– Map information;
– Map behaviour;
– Traffic source.

Map information

This menu enables you to display or hide certain information such as the address number before the street name, the street names, the name of the street after the current street, and the current street name on the map.

Map behaviour

This menu enables you to set the following behaviours

– show lane images;
– in 2D mode, rotate the map with the vehicle's direction;
– automatically move to 3D when guidance is launched;
– automatically zoom in 2D mode;
– automatically zoom in 3D mode.

Traffic source

This menu enables you to choose the traffic information source from a preset list.

Accessing the radio

Touchscreen

From the main menu, press “Multimedia”, then “Radio”.

Radio front panel / Multimedia front panel

Press the “Radio” button on the panel to select the radio source.

Selecting a wavelength

Select the required waveband (AM, FM or DR) by pressing ***1***:

– AM (depending on the vehicle);
– FM;
– DR.

You can also select the waveband using the steering column control (refer to the control details).

Choose an FM or AM radio station

There are different modes for choosing a radio station.
After having selected the wavelength, select the mode by pressing tabs ***3***, ***4*** or ***5***.
Three search modes are available:

– “Frequency” mode (tab ***3***);
– “List” mode (tab ***4***);
– “Preset” mode (tab ***5***).

These modes can be changed with the steering column control.

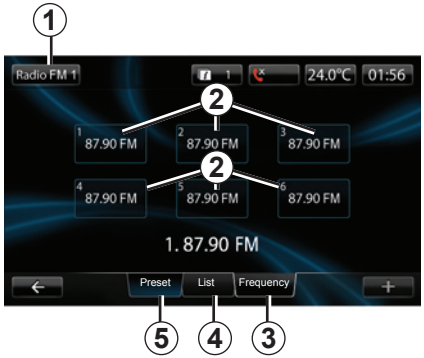

“Preset” mode

This operation mode allows you to recall on demand those stations which you have already stored (refer to information on “Storing a station” in this section).
Press the buttons ***2*** (numbered 1 to 6) to select your stored stations.

You can also change a saved station using the steering column control.

“List” mode
This mode displays a list of available radio stations. These are listed alphabetically (FM band only).

Press ***6*** or ***7*** to scroll through all the stations.
To update this list, please see the following pages.

The names of the radio stations that do not use the RDS system will not appear on the screen. Only their frequency is displayed and sorted at the beginning of the list.

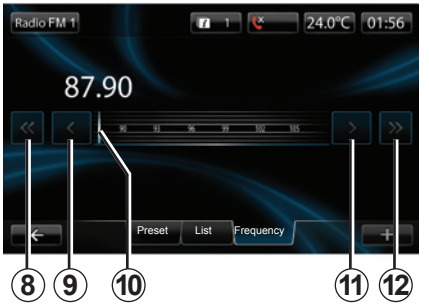

“Frequency” mode
This mode allows stations to be searched for either manually or automatically by scanning the selected range of frequencies.
To scan the frequency range:
– manually run through the frequencies in steps by repeatedly pressing ***9*** or ***11***;
– automatically go to the next station by pressing ***8*** or ***12***;
– move the cursor ***10*** to find the required frequency.

Selecting an DR radio station

There are different modes for choosing a radio station.

After selecting the waveband, select the mode by pressing the tabs ***15*** or ***16***.

Two search modes are available:
– “List” mode (tab ***15***);
– “Preset” mode (tab ***16***).

These modes can be changed with the steering column control.

“List” mode

This mode displays a list of available radio stations.

Press ***13*** or ***14*** to scroll through all the stations.
To update this list, please see the following pages.

“Preset” mode

This operation mode allows you to recall on demand those stations which you have already stored (refer to information on “Storing a station” in this section).
Press the buttons (numbered 1 to 6) to select your stored stations.

You can also change a saved station using the steering column control.

Pop-up menu “+”.

FM or AM

From one of the three modes, press “**+**” to:
– change the source (Radio, USB, SD, etc.);
– add a station to your favourites;
– save a station;
– get text information;
– access the radio settings.

Storing a station

From “Frequency” mode or “List” mode, press “**+**” then “Save as preset”.
You can also press one of the preset buttons until you hear a beep.

You can store up to 6 stations per band.

Text information (Radio text)

Some FM radio stations broadcast text information relating to their programmes (e.g. song titles).
Note: this information is only available for certain radio stations.

DR

From one of the two modes, press “**+**” to:
– change the source (Radio, USB, SD, etc.);
– Save as preset;
– display radio text;
– digital radio services;
– settings.

Storing a station

From “List” mode, press “**+**”, then “Save as preset”.
You can also press one of the preset buttons until you hear a beep.

You can store up to six radio stations.

Text information (Radio text)

Some DR radio stations broadcast text information relating to their programmes (e.g. song titles).

Note: this information is only available for certain radio stations.

Digital radio services

From the pop-up menu, press “Digital radio devices” to access the following services:

– EPG;

– Intellitext;

– Slideshow.

EPG (DR) program guide

When this feature is activated, your audio system will display the station’s upcoming programs of the day.

Note: This information is only available for the selected station’s next three time slots.

Intellitext (DR) function

This feature allows access to text information recorded on some radio stations. You can scroll through the text to display new updates on business, politics, health, weather and sports.

Slideshow

This function runs through all the photos as a slideshow.

Radio settings

FM

From one of the three modes, press “**+**” to access the radio settings menu. From the radio settings, you can set the following elements:

– following an FM station;
– activate/deactivate traffic information;
– activate/deactivate the programme type search;
– update the list of radio stations.

Following a station FM (RDS-AF)

The frequency of an FM radio station may change depending on the geographical area.

In order to keep listening to the same radio station when driving, activate the RDS-AF function so that your audio system can automatically retune the frequency.

Note: not all radio stations offer this possibility.

Poor reception can sometimes cause erratic and annoying changes in frequency. In this case you should deactivate the automatic frequency retuning.

To activate/deactivate this function, refer to the section on “Audio settings”.

Traffic information (i Traffic)

When this function is activated, the source is interrupted automatically to receive the traffic bulletins broadcast by certain FM radio stations (depending on the country).

Programme type search (PTY)

When this function is activated, your audio system allows you to display the type of programme (news, sport, etc.) currently being broadcast (depending on the country).

Update radio list

Select this menu to update the list of radio stations.

DR

From one of the two modes, press “**+**” to access the radio settings. From the radio settings, you can set the following elements:
– AF (Alternative Frequency);
– i-Traffic (traffic programme);
– PTY (programme type);
– Simulcast;
– i-Announcement;
– Update the list (DR).

Following a radio station DR (AF)

A DR radio station can change according to the geographical area.

In order to keep listening to the same radio station when driving, activate the AF function so the audio system can retune the frequency automatically.

Note: not all radio stations offer this possibility.

Poor reception can sometimes cause erratic and annoying changes. In this case you should deactivate the automatic frequency retuning.

Traffic information (i Traffic)
With this function activated, the source is interrupted automatically to receive the traffic bulletins broadcast by certain DR radio stations (depending on the country).

Programme type search (PTY)
With this function activated, the audio system lets you display the type of programme (news, sport, etc.) currently broadcast (depending on the country).

Simulcast
This function lets you switch from one DR station to the same FM station on signal loss.

i-Announcement
This function lets you display information (weather, etc.).

Updating the list (DR)
This feature allows you to perform an update of all stations in your area.

Accessing media

This menu enables you to listen to music from an external source (audio CD, USB, SD card, etc).

From the main menu, press “Multimedia”, then “Media”.

Select an input source connected to the system to access the audio files from the following list:

– Audio CD (depending on the vehicle);
– USB;
– SD card;
– auxiliary socket;
– Bluetooth® connection.

From the main menu, you can:

– access the audio files directly;
– access files, music, genres, artists, albums and reading lists;
– access files and/or audio files.

Note: only available sources can be selected. Unavailable sources will be greyed out.

Playback

You can choose between playing all the tracks or playing a single track.

When playing a track, you can:

– access the previous track by pressing ***1***;
– pause by pressing ***2***;
– access the next track by pressing ***3***;
– view the scroll bar ***4***;
– access the current playback list ***5***;
– make a new music selection ***6***.

Pop-up menu “+”

During playback, the pop-up menu “**+**” enables you to:

– change source;
– activate the shuffle function;
– activate repeat playback;
– give the track details for the current track;
– access sound settings.

Accessing photos

From the “Multimedia” menu, press “Pictures” then select the connected source (Card SD, USB, etc.) to access the photos. The system offers you two options:

– “read all photos”;
– “Read a photo”.

Note: some formats may be unreadable by the system.

Options from folders

From the list of folders/photos, press “**+**” to:

– change the source;
– display full screen;
– display the slideshow;
– access zoom in;
– access photo settings.

Photo playback is only possible when the vehicle is stationary.

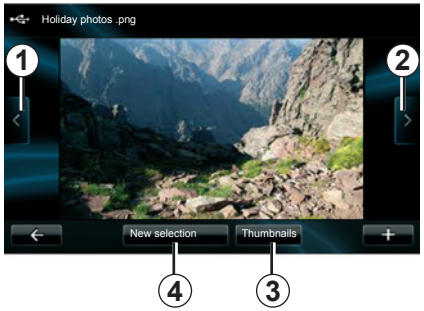

Playback

You can choose between reading all the photos in a slideshow or viewing a single photo.

When viewing a photo, you can:

– access the previous photo by pressing ***1***;
– access the next photo by pressing ***2***;
– alternate between miniature and fullscreen modes by pressing ***3***;
– make a new photo selection by pressing ***4***.

Pop-up menu “+”

When viewing a photo/slideshow, press “**+**” to:

– display all photos in thumbnail form;
– display full screen;
– display the slideshow;
– zoom;
– change the source;
– access photo settings.

Settings

From the settings, you can:

– change the display time for each photo in the slideshow;
– change the type of transition between each photo in the slideshow;
– change the type of display (normal or fullscreen).

Press “Done” to save your changes.

Note: the display is in normal mode by default.

Accessing videos

From the “Multimedia” menu, press “Video” then select the source connected (SD card, USB, etc.) to access videos. The system offers you two options:

– “play all videos”;
– “play a video”.

Note: The source video formats can be MPEG4, WMA, WMV, etc. Some video formats cannot be read by the system.

Options from folders

From the list of folders/videos, press “**+**” to:

– change the source;
– access the settings.

Video playback is only possible when the vehicle is stationary.

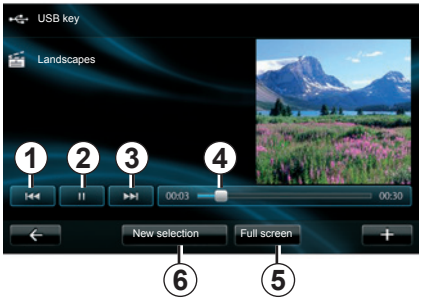

Playback

You can choose between playing all the videos or playing a single video.

When playing a video, you can:

– access the previous video by pressing ***1***;
– pause by pressing ***2***;
– access the following video by pressing ***3***;
– view the scroll bar ***4***;
– view the video in fullscreen ***5***;
– select a new videos by pressing ***6***.

Pop-up menu “+”

During video playback, press “**+**” to:

– change the source;
– access the settings.

Settings

From the settings, you can choose the type of display, normal (half-screen) or fullscreen.

Press “Done” to confirm.

Note: the display is in normal mode by default.

MULTIMEDIA SETTINGS (1/2)

Accessing multimedia settings

From the “Multimedia” menu, press “Settings”, then select the element you wish to modify:

– Sound;
– Radio;
– Media;
– Pictures;
– Video.

Sound

This menu allows you to configure different sound settings:

– **Spatialisation**, for setting sound distribution in the vehicle;
– Ambience, for selecting a preset sound (Pop-rock, Classic, Jazz, Neutral, Manual). If you select Manual, you will be asked to set the treble and bass levels. Once you have made the adjustments, press “Confirm” to confirm your settings.
– **Bass Boost Arkamys**, for activating/deactivating bass amplification (depending on the vehicle).
– **AGC**, for achieving even sound volume between two audio tracks (depending on the vehicle).

Radio

This menu enables you to adjust the radio settings:

– activate/deactivate searching for alternative frequencies;
– activate/deactivate i-traffic;
– activate/deactivate programme type;
– update list of saved radio stations.

Media

This menu allows you to adjust the multimedia settings:

– activate/deactivate track repeat;
– activate/deactivate shuffle;
– activate/deactivate album image display;
– configure the Bluetooth® connection.

MULTIMEDIA SETTINGS (2/2)

Pictures

This menu allows you to adjust the multimedia settings:

– activate/deactivate track repeat;

– activate/deactivate shuffle;

– activate/deactivate album image display;

– configure the Bluetooth® connection.

Video

This menu enables you to adjust the type of video display (default or fullscreen).

PAIRING AND UNPAIRING A TELEPHONE (1/2)

Accessing the Telephone menu

From the main menu, press “Phone”.

Note: if no telephones are paired to the system, “Settings” will be the only section you can access.

Pairing the first telephone

To pair your phone with the R-Link navigation, there are two pairing methods.

First method of pairing from R-Link

Activate the Bluetooth® connection on your telephone and set its status to “visible”.

Manage devices
To use the device features, you must first set up a Bluetooth connection between your device and your R-Link.
Do you want to do that now?
No
Yes
Add device

A screen message offers a device search.

Press “Yes”, the multimedia system will search for telephones.

Select your telephone from the list. Depending on the model, and if the system so requests, enter the Bluetooth® code on your telephone to pair it to the multimedia system, or confirm the pairing request. Your telephone can ask you for authorisation to share contacts and call logs. Accept the sharing to get this information on the multimedia system.

Second method of pairing from a phone

Activate the R-Link connection on your phone and set its status to “visible”.

Run the Bluetooth® device search on your phone.

Select “Renault R-Link” in your phone list.

PAIRING, UNPAIRING A TELEPHONE (2/2)

Pairing another telephone

From your telephone, activate the Bluetooth® connection.

From the “Telephone” menu, press “Settings”, then “Manage devices”.

From the list of paired phones in the “Manage devices” menu, press the “Add device” button to add a phone to the list.

Unpairing a phone

From the main menu, select “Telephone”, “Settings”, then “Manage devices”.

From the list of paired telephones of the “Manage devices” menu, press the “Delete device” button to delete a phone from the list.

For safety reasons, carry out these operations when the vehicle is stationary.

CONNECTING, DISCONNECTING A TELEPHONE

Connecting a paired phone

No phone can be connected to the hands-free phone system if it has not first been paired. Please refer to the information on “Pairing a telephone” in the “Pairing,unpairing a telephone” section.

Your phone must be connected to the hands-free phone system in order to use all its functions.

Automatic connection

Once the ignition is switched on, the hands-free phone system searches for paired phones in the vicinity (if the Bluetooth® connection is activated).

Searching starts with the last paired telephone.

Note: You are recommended to accept automatic device recognition.

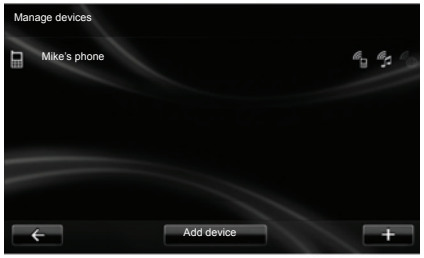

Manual connection (changing the phone connected)

From the “Phone” menu, press “Settings”, then “Manage devices”. You will find the list of phones already paired.

Select the phone from the list to be connected, then press “Add device”.

Disconnect a phone

From the “Phone” menu, press “Settings”, then “Manage devices”.

Select the phone to be disconnected from the list.

Switching off the telephone will also cause it to be disconnected.

Note: if a call is in progress when the phone is disconnected, the call will automatically be transferred to your phone.

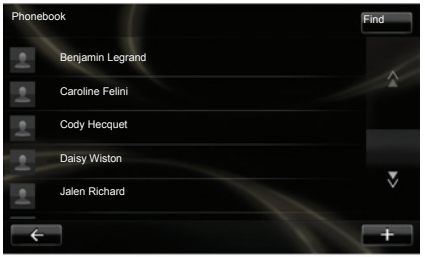

Downloading the phone memory

By default, when pairing and connecting a telephone, the contacts are synchronised automatically.

To deactivate automatic synchronisation, please refer to the “Telephone settings” section in this document.

Note: to access the phonebook from the multimedia system, you will need to authorise data sharing on your telephone. Please refer to the “Pairing, unpairing a telephone” section, and your telephone instructions.

Updating the phonebook

You can transfer your phone contacts into the handset memory of your hands-free phone system via Bluetooth® (if your phone allows this).

From the “Phone” menu, select “Phonebook”, then the “**+**” menu and press “Update telephone data”.

Adding a contact to the Favourites page

From the “Phone” menu, select “Phonebook”, “Display contact” then the “**+**” menu, and press “Add a contact to the Favourites page”.

Note: From the welcome page, press the “Favourites” button to access your favourite numbers.

Confidentiality

The contact list of each phone is stored in the memory by the hands-free system.

For reasons of confidentiality, each downloaded contacts list can only be viewed when the corresponding telephone is connected.

MAKING/RECEIVING A CALL (1/2)

From the “Phone” menu, you can make a call by selecting:

– a contact from the phonebook;
– a number from the call log;
– the keypad to dial the number.

Note: From the welcome screen, press “Favourites” to access your favourite numbers.

Note: For safety reasons, favour the voice recognition system. Refer to the Section entitled “Using voice recognition”.

Making a call from the phonebook

With the telephone connected to the system, from the “Phone” menu, press “Phonebook”.

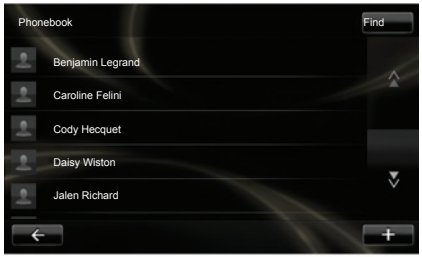

Select the contact (if the contact has more than one number, you will be requested to select the number to call). The call will be started automatically after you press the contact’s number.

Making a call from the log

With the telephone connected to the system, from the “Phone” menu, press “Call logs”.

Call logs
Find
Caroline Felini 06 87 65 43 21 22:15
Benjamin Legrand 06 12 34 56 78 16:32
Benjamin Legrand 06 12 34 56 78 13:37
Simoes de Almeida 06 58 36 90 14 11:08
Daisy Wiston 06 56 78 90 12 8:58
All

Press one of the four tabs, then select the contact/number to call to start the call.

Making a call by dialling a number

With the telephone connected to the system, from the “Phone” menu, press “Dial a number”.

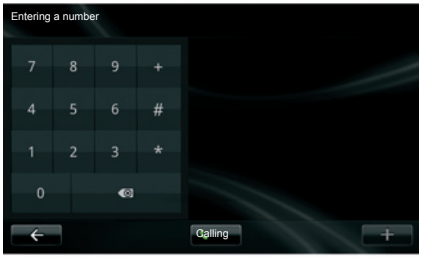

Dial your number using the digital keypad, then press “Call”.

Receiving a call

When receiving a call, the reception screen is displayed with any information available on the caller:

– the name of the contact (if the number is present in your handset memory or the phonebook list);
– the caller’s number (if the number is not present in your handset memory);
– “No Caller ID” (if the number cannot be viewed).

Pick up
To pick up a call, press “Pick up”.

Press “End call” to end the call.

You can also pick up or hang up using the steering column control.

Reject a call
To reject in incoming call, press “Reject”, the person calling you will be redirected to your voicemail.

Place a call on hold
Please refer to the “During communication” section.

Using voicemail

With the telephone connected to the system, from the “Phone” menu, press “Voice mail”.

Configure voicemail

If the voicemail box is not configured, the configuration screen will be displayed. Enter the voicemail number for your telephone operator.

Calling the voicemail box

With the telephone connected to the system, from the “Phone” menu, press “Voice mail”. The system will call the configured voicemail account.

For safety reasons, carry out these operations when the vehicle is stationary.

CALL LOG

Accessing the call log

With the telephone connected to the system, from the “Phone” menu, press “Call logs”.

The call log places the various calls in four tabs:

7 All calls (incoming, outgoing, missed);
6 incoming calls;
5 missed calls;
4 outgoing calls.

For each list, the contacts are listed from the most recent to the oldest.

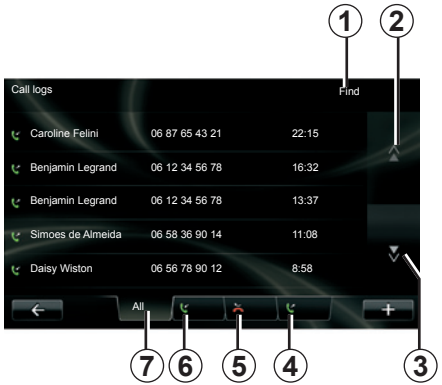

Browsing the call log

Press a tab to view its content.

Press the Up ***2*** and Down ***3*** buttons to scroll through the calls list.

You can search for a contact by pressing the button “Find” ***1***. If the contact has several numbers, you are asked to select the number to call. The call is made automatically by pressing the contact’s number.

Press a call log entry to call the relevant contact.

Please refer to the “Making, receiving a call” section for further information.

Updating the call log

Press “**+**” and select “Update telephone data”. A message will notify you that the data has been updated.

DURING A CALL

During a call you can:

– adjust the volume by pressing the control buttons on the steering wheel of your vehicle;

– end communication by pressing “End call” or by pressing the control buttons under your steering wheel;

– Place a call on hold by pressing “**+**” then select “On hold”. To pick up a call on hold, press “Continue”;

– switch the call to the phone by pressing “**+**” then select “Handset”.

Note: some telephones disconnect from the system during a call transfer.

During a call, return to other system functions (navigation, etc.) by pressing the “Back” or “Home” button then “NAV”.

Accessing telephone settings

From the “Phone” menu, press “Settings”.

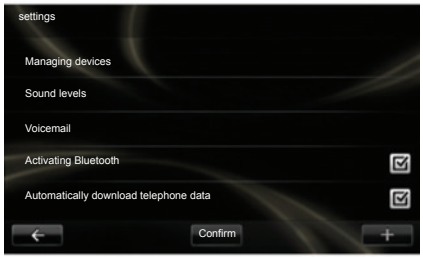

The following choices are offered:

– Manage devices;
– Sound levels;
– Voice mail;
– Turn Bluetooth on;
– Automatically download phone data.

Manage devices

Refer to the information on “Pairing/unpairing a phone”.

Sound levels

This option allows you to adjust the audio level of the hands-free system and the ringtone.

Voice mail

Please refer to the information on “Configuring voicemail” in the “Making, Receiving a call” section.

Turn Bluetooth on

Tick this option to activate or deactivate the Bluetooth® on the hands-free system.

Automatically download phone data

Tick this option to activate or deactivate the automatic download of data from the telephone to the multimedia system.

Access the Driving Eco² menu

(Depending on the vehicle)

From the main menu, press “Vehicle”, then “Driving Eco²”.

The “Driving Eco²” menu grants access to the following information:

– Trip report;
– My prefered trips;
– Eco-coaching.

Trip report

This menu shows you the data saved from your last journey:

– average fuel consumption;
– average speed;
– total consumption;
– recovered energy or mileage completed;
– average environmental driving performance;
– braking anticipation;
– ability to manage vehicle speed.

To save your data, press “Save”, then select the type of journey taken from the following list:

– home/work;
– holiday;
– weekend;
– trip;
– personal.

To reset your data, press “Reset”. A message will ask you to confirm the data reset. Press “Yes” to confirm or “No” to cancel.

My prefered trips

Once you have saved a specific journey (see information on “Journey record”), this menu will show you the changes in your driving style.

Two tabs enable this information to be viewed:

– “Summary” shows the total route distance, the distance covered, the date of updating information and the average rating out of 100.
– “Details” shows the journey record information.

Eco-coaching

This menu monitors your driving style, and provides you with advice to best reduce your fuel consumption, as necessary.

To access this menu, press “Eco-coaching” and carefully read the advice, scroll through the pages by pressing the scroll arrows.

PARKING DISTANCE CONTROL, REVERSING CAMERA (1/2)

Park Assist

Activation, deactivation

Depending on the vehicle, you can deactivate the parking distance control from the touchscreen.

From the main menu, press “Vehicle”, “Settings”, “Park Assist” then “Front park assist” or “Rear park assist”. Activate or deactivate the parking distance control and confirm your choice by selecting “Done”.

Adjusting the audio volume
(Depending on the vehicle)

From the “Vehicle” menu, go to “Settings”, press “Park Assist”, then at the line “Volume”

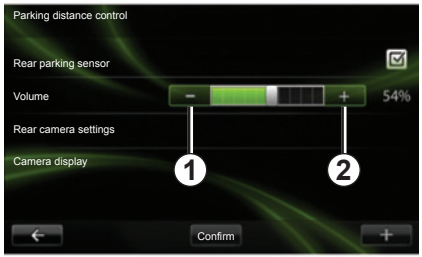

adjust the volume of the parking distance control by pressing buttons “**+**” ***1*** or “**-**” ***2***.

Reversing camera

Activation, deactivation

From the “Settings” menu, press “Park Assist”, then “Rear camera view settings”.

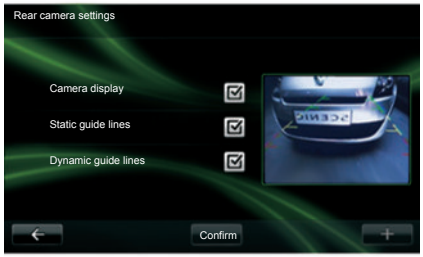

Activate or deactivate the reversing camera and confirm your choice by selecting “Done”.

PARKING DISTANCE CONTROL, REVERSING CAMERA (2/2)

Rear camera view settings

From the “Settings” menu, press “Park Assist” then “Rear camera view settings” to activate/deactivate the reversing camera, the mobile clearance and fixed gauges.

Confirm your choice by selecting “Done”.

To reset the camera settings, from the “Rear camera view settings” menu, press “**+**” then select “Reset factory settings”.

For further information on the reversing camera, please see your owner’s handbook.

Image settings

From the “Vehicle” menu, go to “Settings”, press “Image settings”, then adjust the following settings:

– brightness;

– saturation;

– contrast.

Confirm your choice by selecting “Done ”.

To reset the video settings, from the “Image settings” menu, press “**+**” then select “Reset factory settings”.

ELECTRIC VEHICLE (1/2)

Access the Electrical vehicle menu

(depending on vehicle)

From the main menu, press “Vehicle”, then “Electrical vehicle”.

This menu shows the following information for electric vehicles only:

– flow;
– Consumption details;
– Charge scheduler;
– Comfort timer.

flow

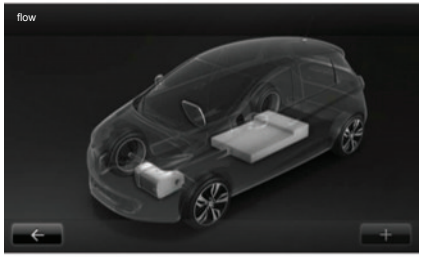

This menu shows you a diagram of the vehicle, and indicates the points where the vehicle is consuming energy or is generating energy to recharge the traction battery.

Consumption details

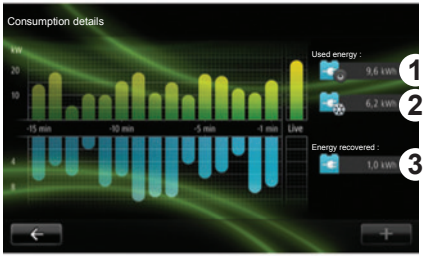

This menu shows you a diagram of the vehicle, and indicates the points where the vehicle is consuming energy (when the vehicle is consuming energy or generating energy to recharge the traction battery) and compares it to the last 15 minutes of driving.
The following appear on the right-hand side of the screen:

1 energy consumed;
2 energy consumption of accessories (air-conditioning, radio, etc);
3 recovered energy.

Charge scheduler

This menu enables you to set the time to start charging.
You can choose:
– immediate charge;
– a daily schedule;
– a weekly schedule.

Note: Charging starts at the programmed time if the engine is switched off and the vehicle is plugged into a power source (subject to subscription).

To change the charging programmer (by week), press the “Change” button under “Calendar”. Press “Add a charging programme” - a window will open to adjust the charge start time and end time.

Confirm your choice by pressing “Confirm”.

Comfort timer

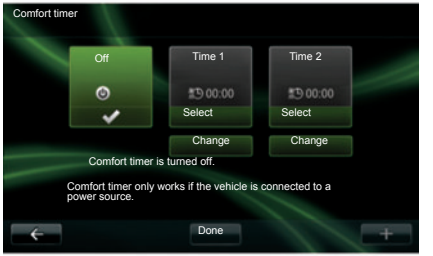

This menu allows you to:
– deactivate the air preconditioning;
– set the start time for air preconditioning.

Press one of the buttons to activate or deactivate it.
You can set up to two air preconditioning times. To set the start time, press “Change”.
Set the time and press “Done” to confirm.

Access the TAKE CARE menu

Depending on the vehicle, you may have a fragrance diffuser, an air ioniser and a system checking the quality of the exterior air.

Scent diffuser

This menu lets you choose the type of fragrance and the intensity of the diffusion in the passenger compartment.

Press “Done” to confirm.

Ioniser

The air ioniser uses two modes:

– Clean: helps to reduce bacteria and allergenic particles present in the air;

– Relax: creates a healthy and relaxing driving atmosphere through the emission of ions;

– Off (stop emission).

Once the mode has been selected, it will automatically stop after 30 minutes.

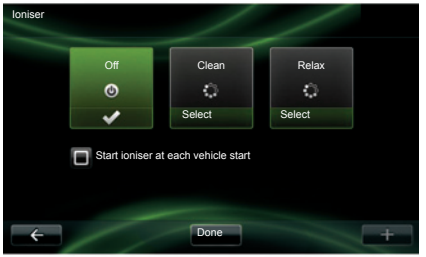

You can activate/deactivate automatic running by ticking the “Start ioniser at each vehicle start” option. Press “Done” to confirm your choice.

Outside air quality

This menu shows you the air quality graph.

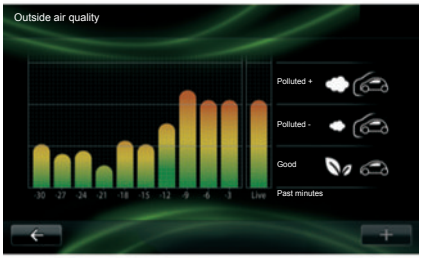

The graph gives an estimate of the outside air quality over the last 15 minutes. The three pictograms indicate the quality level (respectively from the healthiest to the most polluted air):

.

Onboard computer
(depending on vehicle)

From the “Vehicle” menu, select, “Onboard computer” to access the following information since the last reset:

– date of starting calculation;
– total distance;
– average speed;
– average fuel consumption;
– total fuel or energy consumption.

To reset the on-board computer and instrument panel information, press “Reset” and confirm by pressing “Yes”.

Settings
(depending on vehicle)

From the “Vehicle” menu, select “Settings” to access the parking distance settings and activate/deactivate the options from the following:

– automatically fold in the wing mirrors upon locking the vehicle;
– lock/unlock doors while driving;
– activate the rear windscreen wiper when selecting reverse gear;
– activate daytime running lights;
– only unlock the driver’s door when opening the door;
– set the driving style indicator on the instrument panel;
– activate/deactivate the Eco² Driving route plan.

Park Assist

Please refer to the “Parking distance control, reversing camera” section.

INTRODUCTION TO THE SERVICES MENU

Access the Services menu

From the main menu, press “Services”.

The “Services” menu grants access to the following elements:

– R-Link Store;
– Navigation services;
– Settings;
– Your applications.

Some services are accessible for free during the trial period. You can extend the subscription online at www.MyRenault.com or through your country’s R-Link Store .

Introduction to R-Link Store

R-Link Store is the applications store for your multimedia system. Here you can buy applications or subscriptions to services through a secure online system.

Please refer to the “Downloading and installing applications from R-Link Store” section for more information.

Navigation services

Please refer to the “Navigation services” section.

Settings

This menu brings together the management tools for applications and connections. Please refer to the “Services Settings” section for more information.

DOWNLOADING AND INSTALLING APPLICATIONS (1/4)

R-Link Store is an online shop for buying applications, services and content. R-Link Store, available depending on the country, can be accessed directly using the multimedia system or from a computer connected to the internet.

Note: some products can only purchased via a computer connected to the Internet on R-Link Store. If so, a message will be displayed to notify you. Please refer to “Downloading and installing applications from a computer”.

Note: some applications are paid. For further information about buying applications, please see the general conditions of sale.

The availability of the services described varies depending on the country.

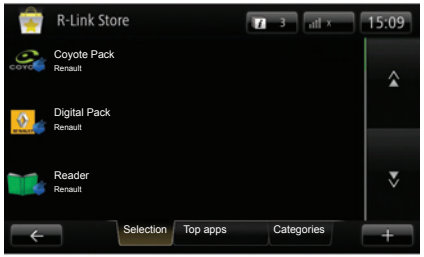

Downloading and installing applications from R-Link Store

From the “Services” menu, press “R-Link Store”.

The available applications are classified in three tabs:

– **Selection** presents a selection of applications;
– **Top apps** classes the applications by order of popularity;
– **Categories** shows the applications by theme: entertainment, maps, etc.

Select an application to get a description.

The “**+**” menu grants access to the following elements:

– **Search** enables you to search for an element using a key word;
– **Update** enables you to search for available updates for the applications, services and content installed;
– **My products** gives a summary of the elements bought along with the expiry dates for the products concerned;
– **Legal information** displays the legal information about R-Link Store.

DOWNLOADING AND INSTALLING APPLICATIONS (2/4)

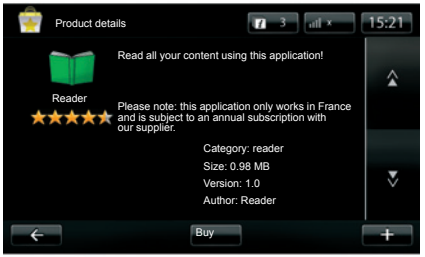

Press “Purchase” to choose the type of payment.

The multimedia system system offers two types of payment: by My Renault account or by credit or debit card. Select one of the two options, tick the box to accept the general conditions of sale for R-Link Store, then go on to payment.

Note: it is mandatory to enter an e-mail address. An invoice will be sent to this address, along with the user and installation instructions, depending on the application purchased.

Pay using My Renault account

Enter the e-mail address and password for your My Renault account, then press “OK”.

Choose a credit or debit card from those already linked to your My Renault account, or add a new one.

Enter the card details, then press “Confirm”.

Your application download will begin immediately. Once the application has been downloaded, its icon will be displayed in the “Services” menu.

Note: the download time for the application can vary depending on the size of the application and on the reception quality on the mobile network.

Note: to use this type of payment, you must first create a My Renault account. Please see the information on “Creating an account in My Renault” open the next page.

Paying by credit or debit card

Enter a valid e-mail address, then press “OK”.

Enter the card details, then press “Done”.

Your application download will begin immediately. Once the application is downloaded, its icon is displayed in the “Services” menu.

Note: the download time for the application can vary depending on the size of the application and on the reception quality on the mobile network.

Note: the card details you enter in the system when making a purchase are automatically saved. To delete them from the system, please see the information on “Deleting card details”.

For safety reasons, carry out these operations when the vehicle is stationary.

DOWNLOADING AND INSTALLING APPLICATIONS (3/4)

Downloading and installing applications from a computer

You can also download applications from a computer connected to the Internet (particularly useful for large files). You can also manage your products from your computer and transfer them to your multimedia system via the system SD card.

Note: some products can only be purchased from a computer connected to the Internet, from the www.renault.com website.

Create an account for My Renault

To buy and download applications from a computer connected to the Internet from www.renault.com, you must first create an account My Renault:

– from a computer connected to the Internet, open your browser, go to www.renault.com and select your country;

– click on the “Connection” button and follow the steps indicated on the website to create your account My Renault.

Once you have created an account, you can explore the catalogue of applications and search for product updates.

Note: for further information, click on “Help” ***2*** or see an Authorised Dealer.

The screens shown in the user manual are not contractual.

Searching for updates

– Log in to your account My Renault then click on “Updates” ***1***. The website displays the updates available for the multimedia system software, your applications, your map data, etc.

– Select the updates you want to install, then follow the procedure to collect them on the SD card.

Note: during synchronisation, the installation of R-Link Toolbox software is proposed. You should install this software to be able to download products and updates to the SD card.

Note: internal software updates for the multimedia system are only available from a computer connected to the Internet.

Installing applications via the SD card

Insert the SD card into the SD port on your vehicle. The multimedia system detects new applications and copies them automatically. The installation will be executed on your R-Link after the SD card is inserted in the vehicle.

Managing personal data

The system stores e-mail addresses and card details in the memory.

Deleting an e-mail address

When you purchase on R-Link Store, when you enter an e-mail address, press the button at the far right of the “E-mail” line. The list of e-mail addresses saved in the system is displayed.

Press ***1*** opposite the address you wish to delete. The address is immediately deleted.

Restore factory settings

From the main menu, press “System”, then “System settings”.

This menu lets you reset all the system settings and/or delete all personal data.

Data sharing

You can authorise or reject data sharing from the moment the system is started. Please refer to the “Starting, Stopping” section.

Refusing to share data stops the connections of applications and services.

Deleting credit or debit card data

When you make a purchase with a credit or debit card, press “Pay with a card already saved in the memory” on the purchase confirmation form. The list of credit or debit cards saved in the system is displayed.

Press ***2*** opposite the card data to be deleted. The credit or debit card data is immediately deleted.

Note: the vehicle must be connected to a mobile network to be able to delete card data.

Accessing the services settings

From the main menu, press “Services”.

The “Settings” menu enables you to adjust the following elements:

– Applications manager;
– Connectivity manager;
– Navigation services;
– Update applications;
– Data sharing settings;
– Activate/deactivate Bluetooth®.

Applications manager

The applications manager enables you to delete application data, uninstall applications and view the following information:
– about;
– system usage;
– confidentiality.

Delete application data
Select the application from which you wish to delete data, select the first tab, press “**+**” then “Delete application data”.

Deleting an application
Select the application you want to delete, select the first tab, press “**+**” then “Delete application”.

Connectivity manager

This menu enables you to manage your Bluetooth® peripherals. Refer to the “Pairing/unpairing a telephone” section.

Navigation services

Refer to the “Navigation services” section for more details.

Update applications

This menu lets you search for installed application updates, but requires a valid subscription.

Data sharing settings

This menu enables you to activate or deactivate data sharing.

Note: in the event of deactivating data sharing, certain applications may not operate correctly.

Activate/deactivate Bluetooth®

Press this button to activate or deactivate the Bluetooth® on the multimedia system. A message is displayed to indicate the activation or deactivation of the Bluetooth®.

SYSTEM SETTINGS (1/3)

Accessing the system settings

From the main menu, press “System”.

The “System settings” menu enables you to adjust the following elements:

– Language;
– Display;
– Sound;
– Clock;
– Safety warnings;
– Home screen;
– Keyboards;
– Set units;
– Status & Information;
– Remove SD-card;
– Restore factory settings.

Language

This menu is used to select a language to apply to the system. Select the desired language, then a voice.

Display

This menu is used to adjust the following settings:

– **Day brightness adjustment**.
– **Night brightness adjustment**.
– **Switch to night mode at night:** tick this option to activate the automatic switchover to night/day mode. The system switches to night mode when the external light is low or when the headlights are lit.
– **Use night mode:** select this option to force night mode.

Sound

This menu is used to adjust the following settings:

Sound levels

Lets you adjust the main sound levels:
– traffic information;
– hands-free system;
– phone ringtone;
– navigation instructions;
– synthetic voices;
– application alerts.

Alerts

enables the audio alert volume to be adjusted, and also authorises or prevents alerts when the touchscreen is switched off.

SYSTEM SETTINGS (2/3)

Speed sensitive volume

Allows automatic volume increase with speed.

Computer voice

Enables the type of information given by a synthetic voice to be adjusted.

Voice

Enables the system voice to be chosen. Please refer to the “Volume and voice” section for further information.

Clock

This menu is used to set the system clock and the time display format. It is recommended to keep the automatic setting.

Safety warnings

This menu enables the alerts provided by the system to be activated or deactivated. Tick the alert boxes you wish to activate.

Home screen

This menu sets the configuration of the welcome screen.

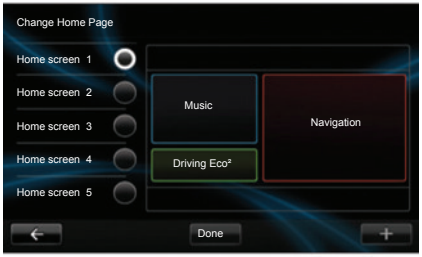

Choose one of the configurations from the left-hand list. The right section of the screen gives a preview of the changes. According to the equipment of your vehicle, the number of configurations may be reduced.
Once you have chosen a configuration, press the “Done” button to confirm your choice.

Keyboards

This menu enables you to choose the virtual keypad used by the system:

– choose an alphabet type from Latin, Greek and Cyrillic, then press next;

– choose a keypad type from the choices on offer, then press “Done” to confirm your selection.

Set units

This menu enables you to choose the type of unit for various elements:

– distance units;
– coordinate display;
– temperature units;
– barometric units.

Status & Information

This menu gives you various pieces of system information:

– version information;
– GPS status;
– network status;
– licences;
– copyright.

Remove SD-card

This menu enables you to eject the SD card safely.

To remove the SD card from the SD port, please refer to “SD card: use, initialisation”.

Restore factory settings

This menu allows you to delete all information from the system.

Note: After resetting, the system will restart in English. To change the language, please refer to the information on “Language” in this section.

OPERATING FAULTS

System		
Description	**Causes**	**Solutions**
No image is displayed.	The screen is on standby.	Ensure that the screen is not on standby.
No sound can be heard.	The volume is set to minimum or pause.	Increase the volume or deactivate pause.
No sound comes from the left, right, front or rear speakers.	The balance or fader settings are incorrect.	Adjust the sound balance or fader correctly.
No map is displayed.	The SD card is missing or damaged.	Check the SD card is present.

Navigation		
Description	**Causes**	**Solutions**
The location of the vehicle on the screen does not correspond to its actual location, or the GPS marker on the screen remains grey or yellow.	Incorrect positioning of the vehicle caused by GPS reception.	Move the vehicle until reception of the GPS signal is improved.
The directions on the screen do not correspond to the actual road.	The SD card is out of date. The map is not up to date.	Download an update from MyRenault.
Traffic flow information is not displayed on the screen.	Guidance has not been activated. The subscription is not active.	Ensure guidance is activated. Select a destination and begin the guidance.
Certain items on the menu are not available.	Depending on the current command, some items will be unavailable.	
Voice guidance is unavailable.	The navigation system does not include the intersection. Voice guidance or guidance is deactivated.	Increase the volume. Ensure voice guidance is activated. Ensure guidance is activated.

Navigation		
Description	**Causes**	**Solutions**
The directions of the voice guidance do not correspond to your exact location.	The voice guidance may vary according to the environment.	Drive according to the actual conditions.
The suggested route does not start or end at the required destination.	The destination is not yet recognised by the system.	Enter a road near to the required destination.
The system calculates a detour automatically.	Prioritising avoid area settings or traffic restrictions will affect the calculation of the route.	Deactivate the “avoid area settings” function.

Phone		
Description	**Causes**	**Solutions**
No sounds or ringtone can be heard.	The mobile phone is not connected to the system. The volume is set to minimum or pause.	Ensure that the mobile phone is connected to the system. Increase the volume or deactivate pause.
Impossible to make a call.	The mobile phone is not connected to the system.	Ensure that the mobile phone is connected to the system. Unlock the phone keypad.

Voice recognition		
Description	**Causes**	**Solutions**
The system does not recognise the voice command stated.	The voice command has not been recognised. The voice recognition time delay has expired. The voice recognition cannot operate properly due to a noisy environment. The user spoke after the beep.	Check that the spoken voice command exists (refer to the “Using voice commands” section). Speak within the voice recognition time delay. Speak in a quiet environment.

ALPHABETICAL INDEX (1/2)

A
address ..... GB.23 → GB.27, GB.44
air ioniser ..... GB.71 – GB.72
answering a call ..... GB.61 – GB.62

B
buttons ..... GB.5 → GB.12, GB.15

C
call history GB.63
colours GB.80
communication GB.64
compass GB.29
connect a telephone GB.59
connected services ..... GB.39 – GB.40, GB.74 → GB.78
controls ..... GB.5 → GB.12, GB.15

D
destination ..... GB.23 → GB.27
detailed route ..... GB.30 → GB.34
detour ..... GB.32 – GB.33, GB.35 → GB.37
dialling a number ..... GB.61 – GB.62
disconnect a telephone GB.59

E
ECO driving GB.66
electric vehicle GB.41, GB.43
  vehicle range ..... GB.69 – GB.70
  charge ..... GB.42, GB.69 – GB.70
ending a call ..... GB.61 – GB.62
energy consumption ..... GB.69 – GB.70
energy-saving GB.66
environment GB.66

F
fascias and steering wheel controls ..... GB.5 → GB.12
favourite
  add GB.19
  delete GB.19
fragrance diffuser ..... GB.71 – GB.72
fuel economy GB.66

G
guidance
  activation ..... GB.23 → GB.27, GB.30
  cancellation GB.32
  voice ..... GB.30 → GB.33

L
language
  change GB.80
linking a telephone ..... GB.57 – GB.58, GB.58

M
map
  display GB.29, GB.38
  map symbols GB.29
  scale GB.29
MENU ..... GB.15 → GB.17
MP3 ..... GB.52
MP3 player GB.52

N
navigation ..... GB.35 → GB.37
navigation system GB.3

O
operating faults ..... GB.83 – GB.84
operation GB.18

P
parking distance control ..... GB.67 – GB.68

ALPHABETICAL INDEX (2/2)

personal data
delete GB.78
precautions during use GB.3

R
radio
automatic mode ..... GB.47 → GB.51
automatic station storage ..... GB.47 → GB.51
choosing a station ..... GB.47 → GB.51
manual mode ..... GB.47 → GB.51
station pretuning ..... GB.47 → GB.51
rear view camera ..... GB.67 – GB.68
receiving a call ..... GB.61 – GB.62
rejecting a call ..... GB.61 – GB.62

S
screen
monitor GB.18
navigation display ..... GB.30 → GB.33
SD card ..... GB.3, GB.13 – GB.14
second route ..... GB.32 – GB.33, GB.35 → GB.37
settings ..... GB.65, GB.73, GB.79 → GB.82
audio ..... GB.55 – GB.56, GB.81
brightness GB.80
customising GB.81
navigation ..... GB.45 – GB.46
soft button ..... GB.4, GB.15 → GB.17
sounds
activate GB.28
deactivate GB.28
stage GB.34
switching off GB.18
system
initialisation ..... GB.13 – GB.14

T
telephone contacts list GB.60
traffic information ..... GB.35 → GB.37
trip computer and warning system GB.73

U
unpairing a telephone ..... GB.57 – GB.58, GB.58

V
voice
activate GB.28
deactivate GB.28
voice control ..... GB.20 → GB.22
voice recognition ..... GB.20 → GB.22
volume GB.28

(www.e-guide.renault.com/multimedia-equipment)

RENAULT S.A.S. SOCIÉTÉ PAR ACTIONS SIMPLIFIÉE AU CAPITAL DE 533 941 113 € / 13-15, QUAI LE GALLO
92100 BOULOGNE-BILLANCOURT R.C.S. NANTERRE 780 129 987 — SIRET 780 129 987 03591 / TÉL. : 0810 40 50 60
NX 1048-3 – 77 11 408 537 – 03/2014 – édition anglaise

MediaNav

RENAULT

Contents

Precautions during use GB.4
General information GB.5
- General description GB.5
- Introduction to the controls GB.8
- On/Off switch GB.10
- Operate and use GB.11
- Volume GB.13

Radio / AUX GB.14
- Listening to the radio GB.14
- Auxiliary audio sources GB.17
- Audio setting GB.20

Navigation GB.21
- The navigation system GB.21
- Reading a map GB.22
- Entering a destination GB.25
- Guidance GB.31
- Map settings GB.36
- Managing the favourites GB.37
- Navigation settings GB.39

Bluetooth device GB.43
- Pairing/unpairing Bluetooth® devices GB.43

Connecting/disconnecting Bluetooth® devices GB.45
Phone Book GB.46
Making a call GB.47
Receiving/during a call GB.48
System settings GB.49
Updating the system GB.51
Operating faults GB.55

All rights including rights vested in the software, content and other materials installed and running in the car as well as displayed trademarks and logos, are reserved by their respective owners.

PRECAUTIONS DURING USE

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. You must always comply with the laws of the country in which you are travelling.

Precautions when operating the system
– Operate the controls (on the dash or near the steering wheel) and read the information on the screen only when road conditions allow.
– Set the volume to a reasonable level so that outside noise can be heard.

Precautions regarding navigation
– Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.
– Depending on the geographical zones, the system may not have the latest information on new roads. Be alert. In all cases, Road Traffic Regulations and road signs always take precedence over the directions of the navigation system.

Precautions concerning the equipment
– Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
– Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
– Do not insert foreign bodies into the player.

Precautions when using the phone
– There are laws which govern the use of phones in vehicles. They do not necessarily authorise the use of hands-free phone systems under all driving conditions: drivers must be in control of their vehicles at all times;
– Using a phone whilst driving is a significant distraction and risk factor during all stages of use (dialling, communicating, searching for a number in the handset memory, etc.).

The description of the models given in this manual is based on the specifications at the time of writing. This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where it is sold. This manual may also contain information about functions to be introduced later in the year.

GENERAL DESCRIPTION (1/3)

Introduction

Your vehicle's multimedia system performs the following functions:

– RDS radio;
– management of auxiliary audio sources;
– hands-free phone;
– navigation assistance.

Radio functions

The multimedia system can be used to listen to FM (frequency modulation), and AM (amplitude modulation) radio stations.

The RDS system makes it possible to display the name of some stations and also for information messages sent by FM stations to be heard automatically:

– traffic bulletins;
– news bulletins;
– emergency messages.

Auxiliary audio function

You can listen to your personal stereo directly through your vehicle's speakers. There are several ways of connecting your personal stereo, depending on the type of device you have:

– 3.5 mm Jack socket;

– audio multi-connection unit (USB);

– Bluetooth® connection.

For more information on compatible devices, contact your approved manufacturer's dealer or visit the manufacturer's website, where available.

Hands-free phone function

The hands-free Bluetooth® phone system makes the following functions possible without having to handle your phone:

– send/receive/suspend a call;

– transfer the list of contacts from the phone memory;

– access the call logs for calls which have come through the system;

– dial emergency numbers.

Telephone compatibility

Some phones are not compatible with the hands-free system, and do not enable you to use all of the available functions or do not provide the best possible sound quality.

For more information on compatible telephones, contact your approved manufacturer's dealer or visit the manufacturer's website, where available.

Navigation assistance function

The navigation system automatically calculates the geographical position of the vehicle by receiving GPS signals.

It suggests a route to your chosen destination using its road map.

Finally, it indicates the route to take, step by step, using the display screen and voice messages.

Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

GENERAL DESCRIPTION (3/3)

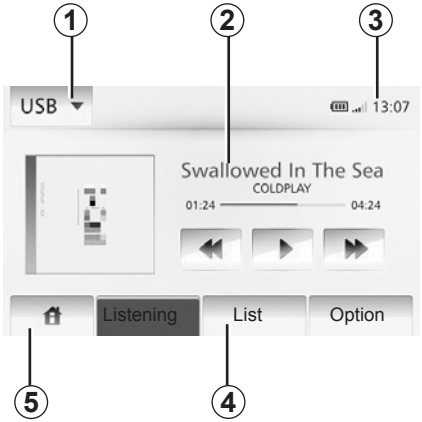

Displays

Menu screen

1 Mode selection area:

– showing the selected mode;

– when mode area is touched, rest of the area will be showing mode list.

2 Contents Area

showing the contents of menu item and information.

3 Time area:

– showing the current time;

– if Bluetooth is connected, it is displayed in the indicator area.

4 Menu area:

– display subordinate menu of mode;

– showing current menu as highlighted color.

5 Home area

Home or Back button: goes back to the home menu or previous screen.

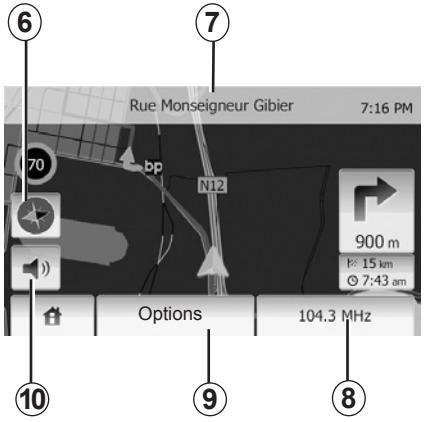

Navigation screen

6 Map mode (2D/3D).

7 Name of the next street.

8 Current audio information.

9 Options for route and map setting.

10 Voice guidance On/Off.

INTRODUCTION TO THE CONTROLS (1/2)

Screen selections are made by touching the desired selection on the screen.

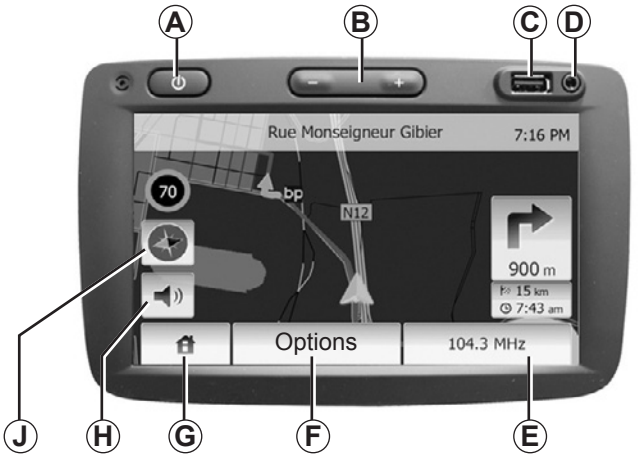

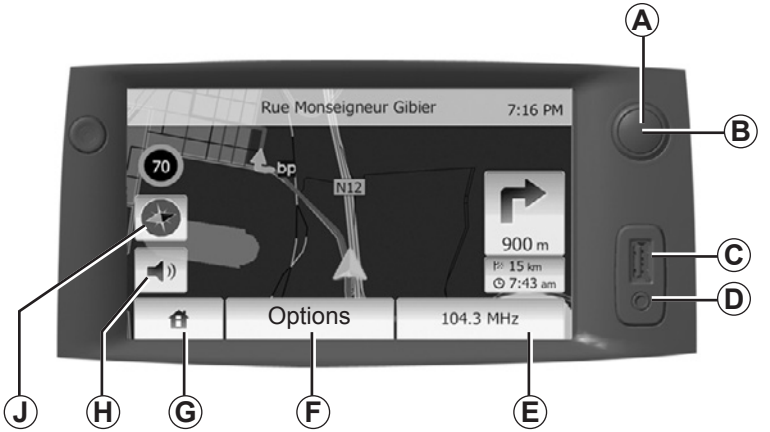

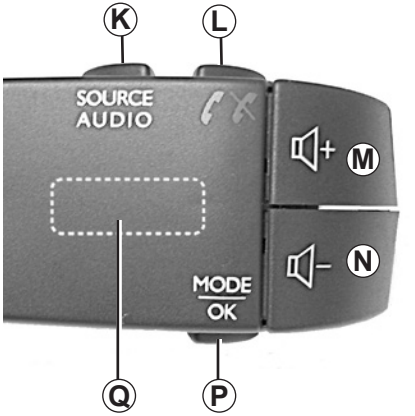

INTRODUCTION TO THE CONTROLS (2/2)

	Function
A	Short press: standby screen mode On/Off
B, M/N	Adjust the volume
C	USB socket
D	3.5mm Jack socket
E	Access the current media (Radio, AUX) source
F	Access the option menu
G	Access the home menu
H	Mute/unmute the voice guidance
J	Change the map view mode (2D/3D)
K	1st press: access functions for the source currently in use Successive presses: select the audio source (Radio, AUX)
L	Answer/end a call
M+N	Mute/unmute the sound
P	Change mode for choosing a radio station (Main, List, Preset)
Q	Radio: search for a radio station
	Media: search for audio track
R	Select from the available media (USB, AUX, iPod® and Bluetooth®)
S	Select the audio reception mode/Alternate between AM and FM
T	Confirm your selection

Switching on

The multimedia system switches on automatically when the ignition is switched on.

In other cases, press button ***A*** to switch on the multimedia system.

With the ignition off, you can use the system for 20 minutes.

Press ***A*** to make the multimedia system operate for about a further 20 minutes.

Switching off

The system switches off automatically when the vehicle's ignition is switched off.

Standby screen

The standby clock mode allows the display screen to be switched off.

When in standby clock mode, the radio or guidance system does not operate.

Press button ***A*** to activate and briefly press ***A*** to deactivate the standby screen.

Any **other** action will temporarily reactivate the screen.

Touching screen

Tap (short press):

– Item selection;

– Item execution (Media playing screen).

When touching forwards button, moves toward the next song.

Press and Hold (long press):

– Item store (Radio screen);

When touching with long presses the preset number, stores the current radio channel.

– Move to scroll with acceleration;

When touching with long presses the list down buttons, scroll (per page) with acceleration.

– fast-forward or rewind (Media playing screen).

When touching with long presses forwards or backwards button, fast winding the song.

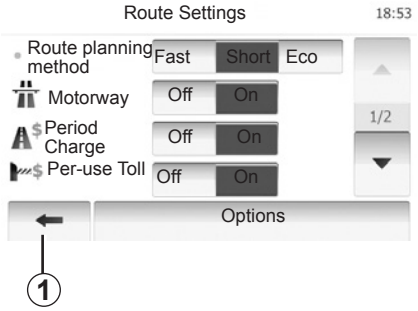

Back to Home menu

System goes back to Home menu directly once you press and hold ***1*** wherever it is.

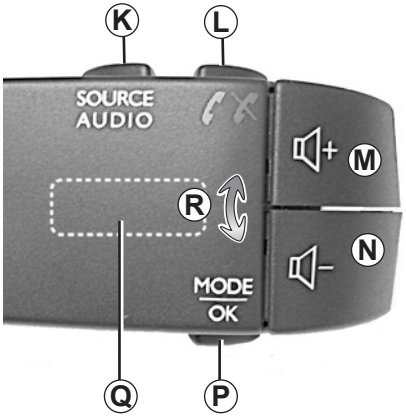

Using the steering column controls

Press button ***P*** to change the radio station search mode.

Rotate wheel ***Q*** to change the station (movement ***R***).

Press ***K*** to change the source (AUX, AM, FM).

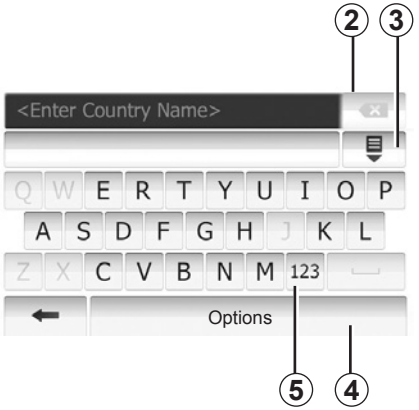

Using an alphabetical keyboard

When entering a heading using an alphabetical keyboard, choose each letter by pressing keyboard.

When choosing each letter, the system will remove the brightness of certain letters to help enter the letters.

Select ***2*** to modify your entry.

Select ***3*** to display list of results.

Select ***4*** to change the keyboard to special layout.

Select ***5*** to use numbers and symbols.

VOLUME

Volume

Adjust the sound level when listening to the different sources, messages, ringtones and phone communications:

– by pressing or turning ***B*** (depending on the vehicle);

– or on ***M***/***N***.

The radio source being listened to is interrupted when “TA” traffic information, news bulletins or a warning message is received.

Set the volume to a reasonable level so that outside noise can be heard.

Muting the sound

Press simultaneously on ***M***/***N*** to mute the sound.

This function is deactivated automatically when the volume control is used or when a news or road traffic bulletin is broadcast.

Volume adjustment according to speed

When this function is activated, the audio and navigation volume will vary according to the vehicle speed.

To activate and adjust this function, refer to the information on “Speed dependent volume control” of the section on “Audio settings”.

LISTEN TO THE RADIO (1/3)

Selecting a wavelength

Press ***1***.
Select the wavelength (FM or AM) required by pressing it.

Choosing a station

There are different modes for choosing a radio station.

After having selected the waveband, select the mode by pressing ***4*** or ***5***.

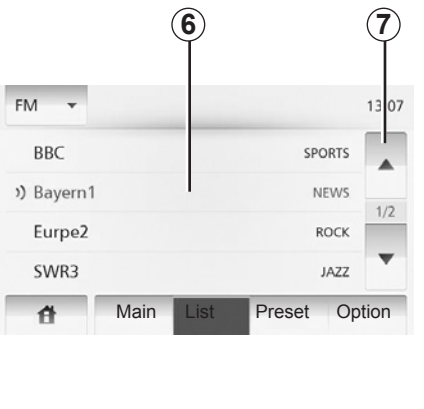

List mode

Select the List mode by pressing ***5***.
This operating mode allows you to find a station easily by name from an alphabetical list (with FM only).

It is possible to scan up to 50 available radio stations.
Select the stations required by pressing zone ***6***.
Press ***7*** to scroll through all the stations.
The names of the radio stations that do not use RDS will not appear on the screen. Only their frequency is displayed and sorted at the end of the list.

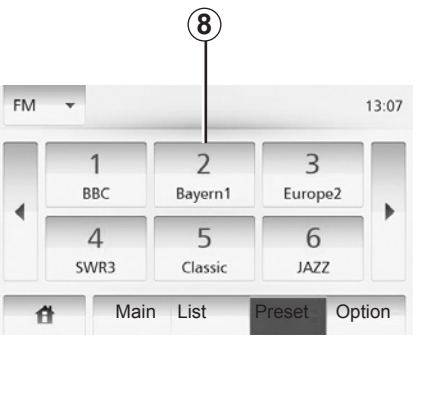

Preset mode

Select the Preset mode by pressing ***4***.

This operation mode allows you to recall on demand those stations which you have already stored (refer to information on “Storing a station” in this section).
Press zone ***8*** to select your stored stations.

LISTEN TO THE RADIO (2/3)

Manual mode

This mode allows stations to be searched manually by scanning the selected wavelength.

Scan the wavelength (advancing in increments of 0.5) by repeatedly pressing ***3***.

Briefly press ***2*** to start an automatic search for radio stations.

Repeat the operation each time the search stops if necessary.

You can also move wheel ***Q*** to launch an automatic station search.

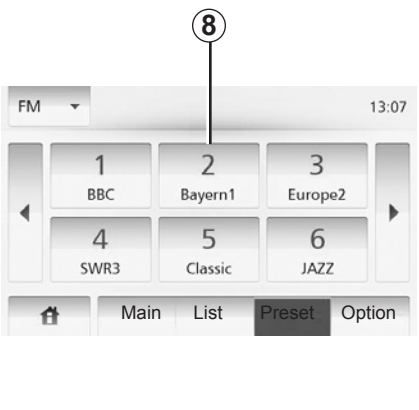

Storing a station

Select a radio station by using one of the modes described above.

Press and hold one of the buttons on the zone ***8***.

You can store up to 12 stations per wavelength.

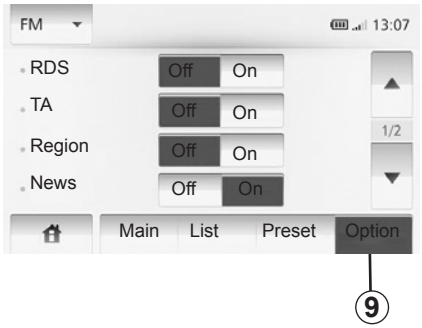

Radio settings

Display the settings menu by pressing ***9***. You can activate or deactivate functions by pressing “On” or “Off” (the setting menu varies depending on the wavelength).

The available functions are as follows:

– RDS;
– TA (Traffic announcement);
– Region;
– News;
– AM;
– Update list.

LISTEN TO THE RADIO (3/3)

RDS

Some FM radio stations broadcast text information relating to the programme being listened to (the name of a track, for example).

Note: this information is only available on some radio stations.

TA (Traffic announcement)

When this function is activated, your audio system makes it possible to automatically search for and listen to traffic information when they are broadcast from certain FM radio stations.

Note: the automatic broadcasting of traffic information is deactivated when the audio system is set to the AM band.

Once the function is activated, select the news station then choose if you require another playback source.

Traffic information is broadcast automatically and has priority over the source being listened to at the time.

To activate/deactivate this function, refer to information on “Radio settings” in this section.

Region

The frequency of an FM radio station may change depending on the geographical area.

In order to keep listening to the same radio station when changing region, activate the Région function so that your audio system can automatically retune the frequency.

Note: This is only available for certain radio stations.

Poor reception can sometimes cause erratic and annoying changes in frequency. In this case you should deactivate this function.

To activate/deactivate this function, refer to information on “Radio settings” in this section.

News

When this function is activated, it is possible to automatically listen to news when they are broadcast by certain FM radio stations (depending on country).

If you then select the other sources, when a broadcast of the selected programme type is made, it will interrupt the other sources.

To activate/deactivate this function, refer to information on “Radio settings” in this section.

AM

You can activate or deactivate the AM wavelength. To activate/deactivate this function, refer to information on “Radio settings” in this section

Update List

To update the list of stations and obtain the most recent ones, press “Start” (only for FM).

AUXILIARY AUDIO SOURCES (1/3)

Your system is fitted with two auxiliary inputs for connecting an external audio source (MP3 player, portable audio player, USB key, etc.).

To find the input position, please refer to the section on “Introduction to the controls”.

Principles of operation
Connection

There are two types of connections:

– a USB socket,

– a jack.

Connect your portable audio player, depending on the type of device.

Once you have connected a USB socket or jack, the system automatically detects the auxiliary source.

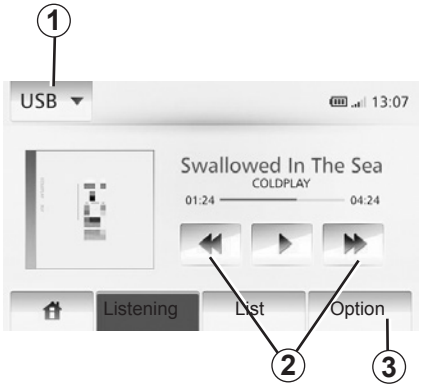

Selecting an auxiliary source

In navigation mode or when listening to the radio, select your auxiliary audio source by pressing “Home” > “MEDIA”. The system starts playing the last audio track played.

Note: any change to the external audio source which is made when the system is not active will not be automatically taken into account.

To change the auxiliary source, press ***1*** to show the list of auxiliary sources and then press the desired auxiliary source from the following possibilities:

– USB;
– iPod®;
– BT: Bluetooth® devices;
– AUX: 3.5mm jack.

Audio formats
The auxiliary audio source formats include MP3 and WMA.

Fast winding
Press and hold ***2*** to fast forward or rewind.
Playback resumes when the button is released.

Repeat
This function enables you to repeat one track or all tracks.
Tap ***3*** and then tap “Off”, “Track”, or “All”.

Shuffle
This function allows you to play all songs on ‘Shuffle’. Press “***3***” then “On”, “Off” or “Folder”.

Only handle the portable audio player when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking).

Auxiliary input: USB socket, Bluetooth®

Connection: USB and portable digital audio player

Connect the socket of your portable audio player to the USB input on the unit.

Once the USB socket of the digital portable audio player is connected, the “USB” menu is displayed.

Note: it may not be possible to connect certain types of digital portable players.

Connection: iPod®

Connect the socket of your iPod® to the USB input on the unit.

Once the USB socket of your iPod® is connected, the “iPod” menu is displayed.

Note: use the iPod® cable for exclusive use of iPod® when connecting iPod® to the USB socket.

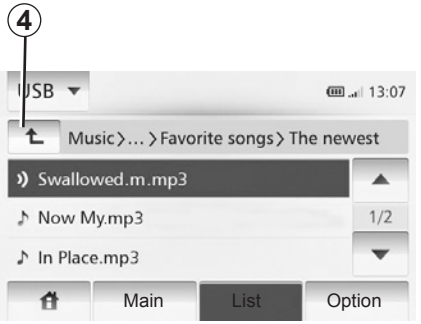

Connection: Bluetooth®

Refer to the section on “Connecting/disconnecting Bluetooth® devices”.

Once Bluetooth® is connected, the “BT” menu is displayed.

Use

Depending on the type of portable audio player, select a folder (MP3 player, USB key) or a playlist (portable digital music player).

Note: once connected, you can no longer directly control your portable digital audio player. You must use the keys on the system’s front panel.

Selecting a track

To select an audio track within a folder, tap “List”.

To go back to the previous level in the folder hierarchy, tap ***4***.

By default, albums are listed in alphabetical order.

Note: if you connect a USB key, all the folders will be at the same level on the tree structure.

Depending on the type of digital portable audio player, you can refine your selection by using folders or files.

AUXILIARY AUDIO SOURCES (3/3)

Auxiliary input: jack

Connection

Connect the jack of your portable audio player to the jack input.

Use

No indication of the name of the artist or the track is displayed on the system's screen.

Note: you cannot select a track directly from your audio system.

To select a track, you must do so directly via your portable audio player, when the vehicle is stationary.

AUDIO SETTING

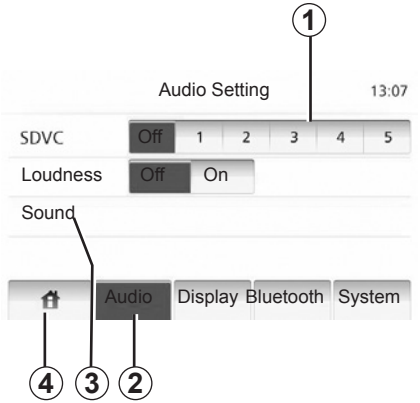

Display the settings menu by pressing “Home” > “SETTING”. Tap ***2***.

You can leave the settings menu by pressing ***4***.

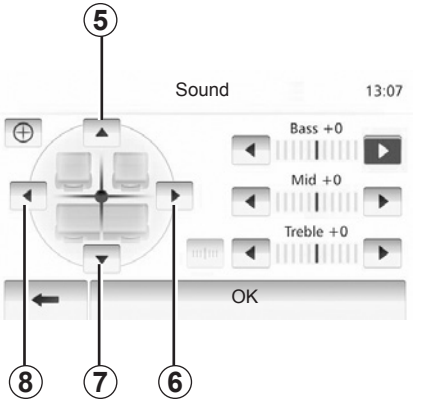

SDVC (Speed Dependent Volume Control)

When the speed of your vehicle is more than 40km/h, the volume level outputs higher than original volume level.

Adjust the volume/speed ratio by pressing zone ***1***.

Loudness

Tap “On” or “Off” to turn off or on the loudness.

Sound

Display the sound menu by pressing ***3***.

Right/left and front/rear balance

Tap ***6*** or ***8*** to adjust the sound the left/right balance.

Tap ***5*** or ***7*** to adjust the sound the front/rear balance.

After setting balance, tap “OK”.

Bass, Mid, Treble

Tap left arrow or right arrow to adjust the Bass, Mid or Treble.

After setting Bass, Mid or Treble, tap “OK”.

The navigation system

The navigation system calculates your position and guides you by using data:
– from the GPS receiver;
– from the digital map.

The GPS receiver

The navigation system uses GPS (Global Positioning System) satellites orbiting the Earth.
The GPS receiver receives signals transmitted from several satellites. The system can then locate the position of the vehicle.

Note: after moving a long distance without driving (ferry, rail freight), the system may take several minutes to adjust before retuning to normal operation.

The digital map

The digital map contains the road maps and town maps that the system requires.

“Map” USB key

Install the most recent version by inserting your USB key into a computer that is connected to the Internet. Refer to the section on “Map update”.

Note: USB key is not supplied with the system.

If possible, always use the most recent version.

Insert the USB key

Insert the USB key into the USB socket ***C*** on the system.

READ A MAP (1/3)

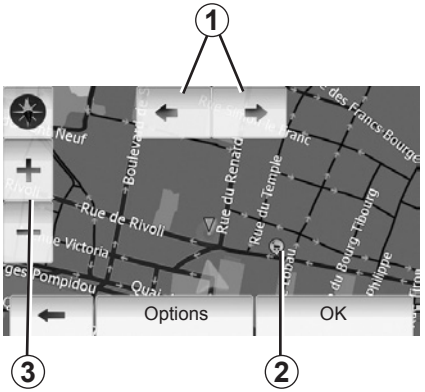

Displaying the map

To display the map around the current vehicle position, press “Home” > “Show map”.

Touch the map screen.

To move around the navigation map, drag the desired direction on the screen.

Press ***3*** to change the scale.

Rotate the map by pressing ***1***.

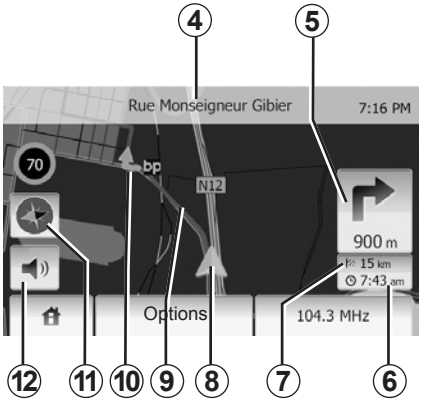

Map key

4 Name of the next major road or road sign information, if applicable.

5 Distance to and direction of next change of direction.

6 Estimated time of arrival.

7 Distance remaining to the destination.

8 Location of the vehicle on the navigation map.

9 Route calculated by the navigation system.

10 Indicates the direction change.

11 2D/3D mode.

12 Mute/unmute the voice guidance.

GPS Location info

This function makes it possible to find out the geographical location of the selected position (Address/latitude/longitude).

Touch desired position on the screen. Press “Options” and then press “News” to find out the exact location of the selected position.

2D/3D mode

Press ***11*** to change the map view between 2D and 3D.

Map icons

The navigation system uses icons ***2*** to display points of interest (POI). Refer to the information on “Display points of interest” in the section on “Map settings”.

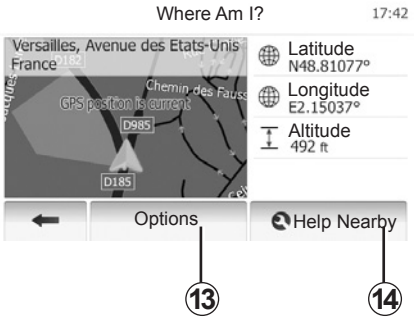

Where am I?

This function allows you to check information about the current position and to search for POI nearby. It operates when GPS is connected.

Tap “Options” on the map screen and then tap “Where Am I?”.

This screen includes the following information:

– Latitude;

– Longitude;

– Altitude;

– House number;

– Current address.

Country information

Press ***13*** then “Country Info”.

This function allows you to view country information depending on your current position.

This screen includes the following information:

– Speed limits;
Speed limits are displayed for expressways. Displayed unit depends on active regional settings. If data not available, then “--” shown instead of table and number.

– Phone country code;

– Emergency number;

– Legal Restrictions effective in the country:

– Maximum blood alcohol;

– Visibility vest required;

– Fire extinguisher required;

– Headlights must be on at all times;

– Spare bulbs required;

– First aid kit required;

– Warning triangle required;

– Helmets required for motorcyclists;

– Snow chains required in winter;

– Snow chains recommended in winter;

– Winter tyres required in winter;

– Winter tyres recommended in winter.

READ A MAP (3/3)

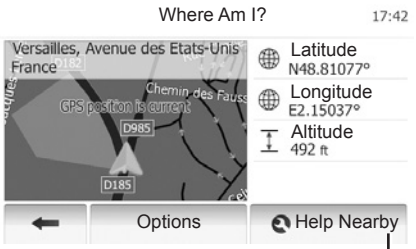

Nearby assistance

This function allows you to search for assistance near your current position.

Tap ***14*** to open a new screen for the quick search.

Information on this screen:
– Car repair services;
– Medical and emergency services;
– Police stations;
– Gas stations.

To search a destination from this screen, refer to the section on “Entering a destination” and the information on “Select one of the “Points of Interest (POI)”.

ENTERING A DESTINATION (1/6)

Destination menu

Tap “Home” > “NAVI” > “Destination” to access the destination menu.

The destination menu offers several methods to enter a destination:

– enter an address (complete or partial);

– select an address from the “Points of interest” (POI);

– select a destination from the previous destinations;

– select an address from the Favourites;

– select for destination by using the map;

– select a latitude and longitude.

Entering an address

Tap ***1***

This item allows you to enter all or part of the address: country, town, street and number.

Note: only addresses known to the system through the digital map are authorised.

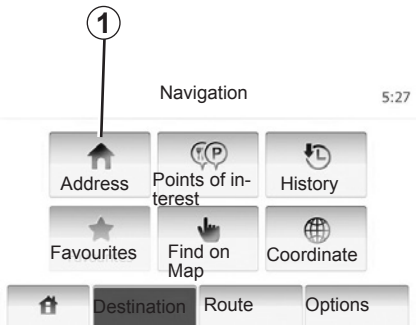

When using for the first time:

– Tap the “Country”.

– Tap the keyboard button to enter the name of the country required.
When entering the address the system will remove the brightness of certain letters to help enter the address.
The system may suggest several country lists by pressing **2**. Select the required country in the lists.

– Proceed in the same way for “Town/Suburb”, “Street”, “Intersecting Street” and “Street Number”.

Note: “Intersecting Street” and “Street Number” are activated after selecting “Street”.

Note: when entering the street, it is not necessary to specify the type of road (street, avenue, boulevard, etc.).

Note: the system stores previous addresses in its memory. Once you have entered a destination by address, then the next time, it is the previous address that will be given.

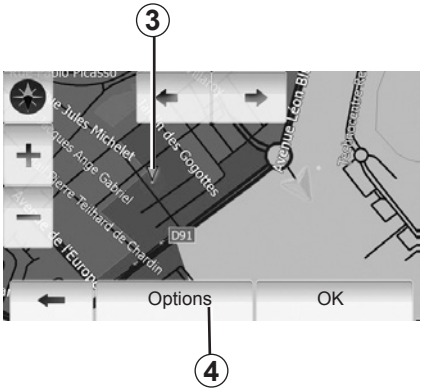

Select from the “Points of interest” (POI)

You can select your destination from the Points of Interest.
You can find a place in different ways:
– with the quick search feature, you can quickly find a nearby place by its name.
– with the preset search feature, you can find frequently searched types of places with only a few screen taps.
– you can search for a place by its category.

Quick search for points of interest

The quick search feature lets you quickly find a place.

Tap the map somewhere to search for points of interest. The point ***3*** appears.

Press ***4*** and then “Points of interest around cursor” to show the list of points of interest with names and distance from point ***3***.

Searching for points of interest using preset categories

The preset search feature lets you quickly find the most frequently selected types of places.

Press “Home” > “NAVI” > “Destination” > “Points of interest” to access preset categories.

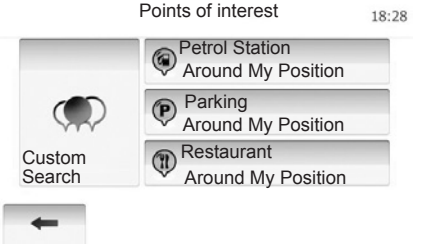

Categories(petrol station/parking/restaurant)
– If an active route exists, “Petrol Station” and “Restaurant” are searched along the route, and “Parking” is searched around the destination.
– If there is no active route (destination is not selected), they are searched around the current position.
– If the current position is not available either (no GPS signal), they are searched around the last known position.

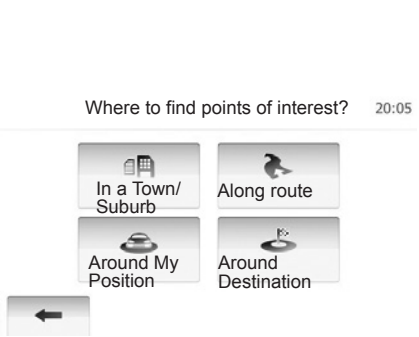

Searching for Points of Interest by category

You can search for Points of Interest by their categories and subcategories.

Tap “Home” > “NAVI” > “Destination” > “Points of interest” > “Custom Search”.

Select the area around which the place should be searched for:

– Tap “In a Town/Suburb” to search for a place within a selected town/ suburb (the result list will be ordered by the distance from the center of the selected city/town).

– Press “Along route” to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for nearby petrol stations or restaurants (the result list will be ranked by the length of the necessary detour).

– Tap “Around My Position” to search around the current position or if it is not available, around the last know position (the result list will be ordered by the distance from this position).

– Tap “Around Destination” to search for a place around the destination of the active route (the result list will be ordered by the distance from the destination).

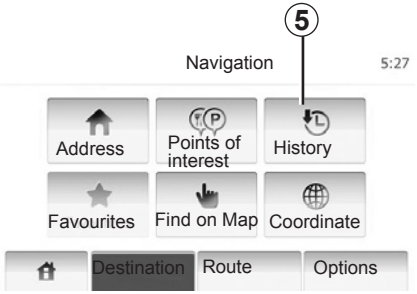

Selecting a destination from the previous destinations

You can find the destination to a location that you have lastly set as the destination. Tap ***5***.

Selecting an address from the Favourites

You can find the destination to a location stored in the Favourites. To utilize this function more effectively, destinations that you often travel to should be stored in advance.

First of all, store in the Favourites by searching the address. Refer to the section on “Managing the favourites”.

Tap “Home” > “NAVI” > “Destination” > “Favourites” to display the list of favorite destinations.

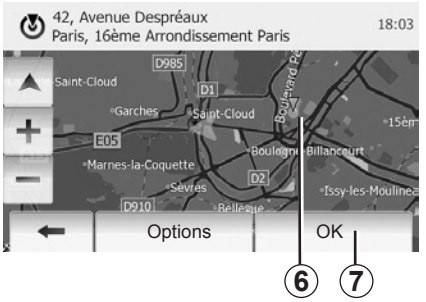

Selecting for destination by using the map

This allows you search for a destination by scrolling the map.

Tap “Home” > “NAVI” > “Destination” > “Find on Map” to select destination on the map.

Press on the location on the map that you want to select as your destination. The ***6*** point is displayed.

Tap ***7*** to select the point ***6*** as the destination.

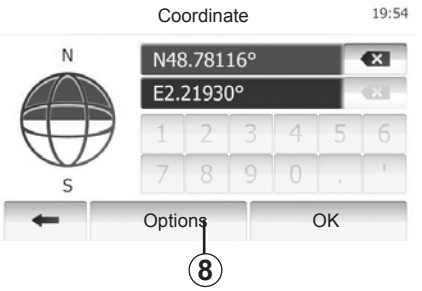

Entering the coordinate of the destination

This allows you search for a destination by entering its coordinate.

Tap “Home” > “NAVI” > “Destination” > “Coordinate”.

You can enter the latitude and longitude values in any of the following formats: decimal degrees; degrees and decimal minutes; or degrees, minutes and decimal seconds.

Tap ***8*** and then tap “UTM” to enter the coordinate in UTM format.

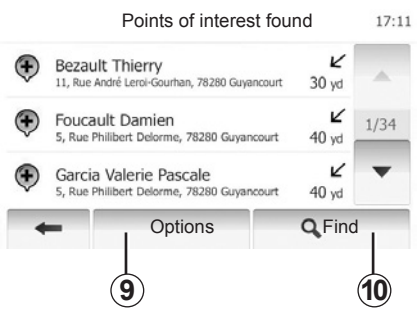

Sorting the list

The result of searching a destination by point of interest, history and favourites can be sorted by name and distance. If an active route exists, they can be sorted by detour. And they also can be shown all on map. Tap ***9***.

Finding a destination by names

In case of selecting a destination by point of interest, history and favourites, you can search for destination in the list by their names. Tap ***10*** and enter names using keyboard.

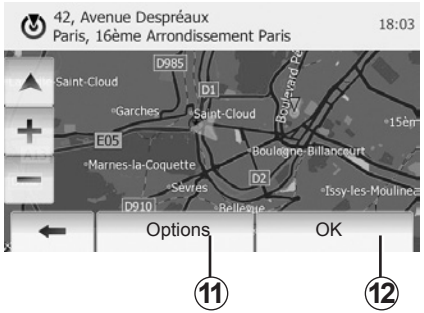

Confirming the destination

There are several possible options before confirming a destination:

– OK;
– Add to favourite destinations;
– Info;
– Return to vehicle.

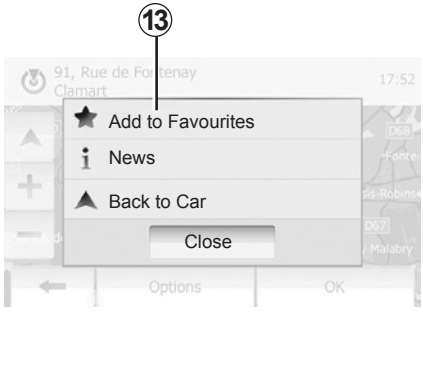

OK

– If there is no active route (destination is not selected), tap ***12*** to confirm the destination as a new route.
– If an active route exists, you can select the destination as a new route or waypoint. Tap ***12*** and then tap “New Route” or “Waypoint”.

Add to favourites

Tap ***11*** and then tap ***13*** to store selected destination in favourites.

ENTERING A DESTINATION (6/6)

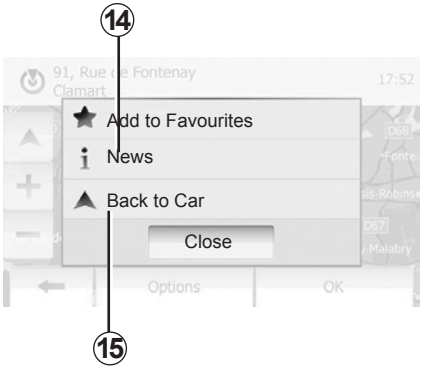

Info

This item allows you to consult the address, latitude, longitude and phone number (phone number is only activated after selecting a point of interest). Tap ***14***.

Return to vehicle.

Press ***15*** to return to the current vehicle position.

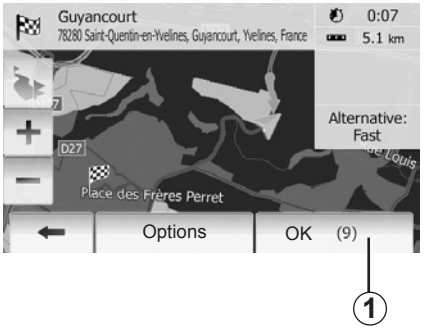

Activating guidance

Tap ***1*** or wait 10 seconds after having entered a destination. Guidance will begin.

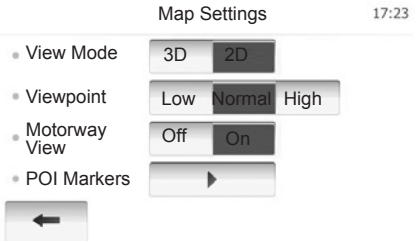

Guidance screens

The system will offer several different navigation maps.

Tap “Home” > “Options” > “Map Settings” and then tap “2D” or “3D” to change the map display.

You can also change the map display by pressing compass on the map.

The different possible full screen displays are:

– 2D;

– 3D.

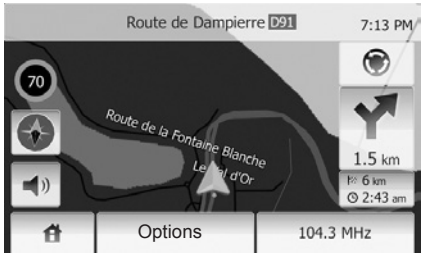

Full screen mode (2D or 3D)

This mode allows you to view the navigation map on the entire screen.

The information on the arrival time and the distance remaining to the destination are located in the bottom right of the map.

The indication for the next change of direction is located in the right side of the map.

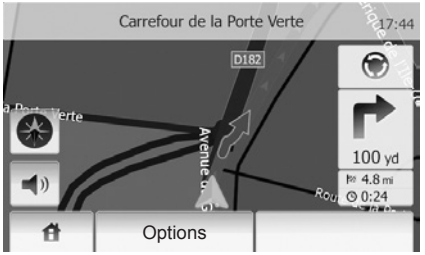

Intersection map

During guidance, before each change of direction, the system will automatically display a close-up of the intersection.

The system will automatically switch back to normal scale after you have passed through the intersection.

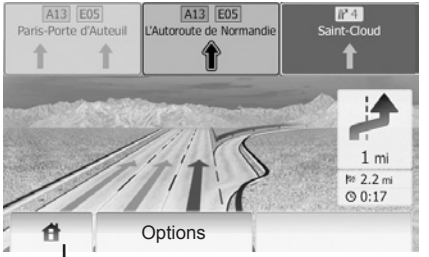

Motorway junction view

During guidance, before each motorway junction, this system will display a 3-dimensional view of the junction.

Note: for some junctions, only a small turn arrow will appear on the map.

The system will switch back to normal mode after you have passed the junction.

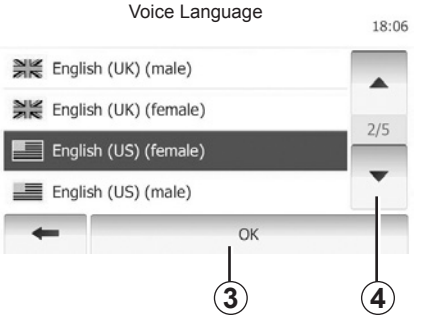

Changing voice guidance language

Press ***2*** and then “NAVI” > “Options”, “Voice Settings” to change the language of the voice guidance.

Scroll the language list by pressing ***4***. Tap the desired language and then tap ***3*** to confirm.

Route information

This function allows you to view your route.

Select “Home” > “NAVI” > “Route” after entering a destination.

Six choices will be given:

– « Edit Route »,
– « Avoidances »,
– « Overview »,
– « Cancel Route »,
– « Route Alternatives »,
– « Route ».

Route overview

Press “Home” > “NAVI” > “Route” > “Overview “ to get a map with an overview of the active route.

The following information will be given:

– The name and/or address of the destination;
– The total time of the route;
– The total distance of the route;
– the special points and sections of the route (e.g. toll gates, toll roads, motorways, etc.);
– alternative routes (e.g. Short, Fast, Economical).

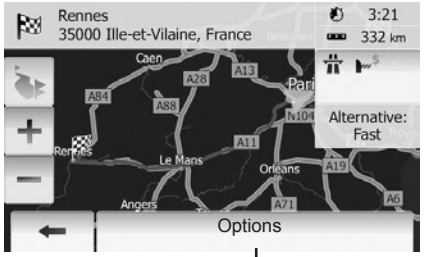

Press ***5*** to display the following options:

– alternative routes;
– route;
– route settings.

Note: for further information, please see overleaf.

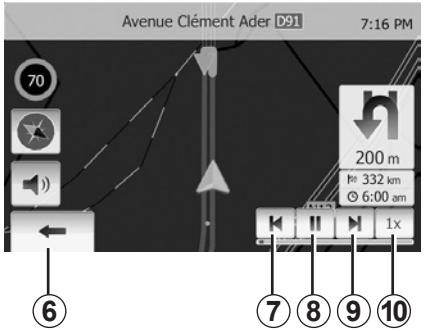

– Simulate Navigation

This function allows you to quickly view the required route.
Start or pause the simulation by pressing ***8***.
Tap ***10*** to increase the speed of the simulation.
You can leave the route simulation at any given moment by pressing ***6***.
You can move to previous/next manoeuvre by pressing ***7*** or ***9***.

GUIDANCE (4/5)

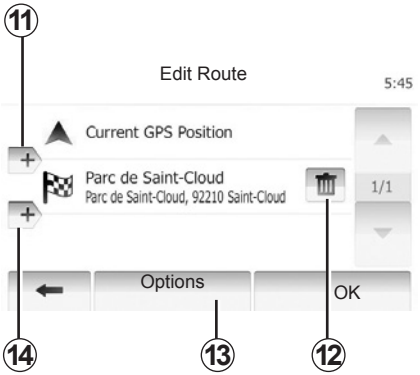

Edit route

Press “Home” > “Route” > “Edit Route” to modify the route by changing the list of stages. You can add or remove waypoints, reorder the list.

Tap ***11*** to add waypoints and tap ***14*** to add a new destination. It offers several methods to enter a destination. Refer to the information on “Entering a destination”.

Tap ***12*** to delete a destination.

Tap ***13*** to reorder the list.

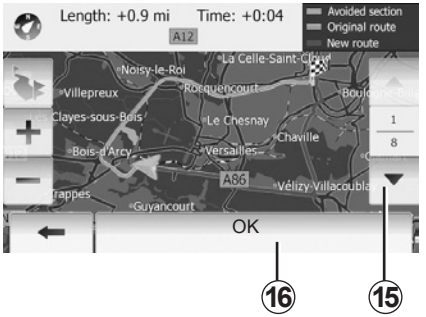

Avoidances

Tap “Home” > “Route” > “Avoidances” to make a detour. Tap a section on the list you want to make a detour.

You can change the section by pressing ***15***.

Confirm the new route by pressing ***16***.

Cancel the route

At any given moment, you can stop the guidance.

Press “Home” > “Route” > “Cancel Route” to cancel the active route.

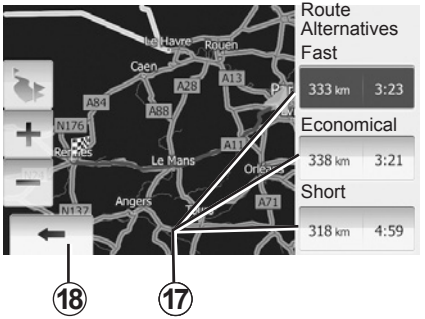

Route Alternatives

This item allows you to change route planning method.

There are three options with distance and time to change route planning method:
– Fast;
– Economical;
– Short.

Refer to the information on “Route settings” in the section on “Navigation settings”.

Tap “Home” > “Route” > “Route Alternatives” and then tap ***17***.

Confrim the new route by pressing ***18***.

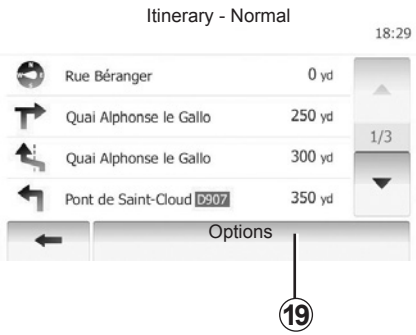

Itinerary

This function makes it possible to view the route plan.

Several details of the route will appear:

– direction-change arrows;

– road number;

– distance before a fork.

Tap ***19*** to sort the details of the route:

– by summary;

It only shows the waypoints (start, via, destination) and their distance, remaining time and arrival time.

– by normal;

It shows all the maneuvers and their signpost information, route numbers, street name and distance. It also shows informational and warning entries, such as settlement names the driver enters, restrictions (access and maneuver restrictions), ignored user preferences, etc.

– by road list.

It sections the route to road names and road numbers. It also shows their length, average direction and travel time information. Waypoints are not shown in this mode.

Route settings

This item enables you to choose your route settings.

Refer to the information on “Route settings” in the section entitled “Navigation settings”.

MAP SETTINGS

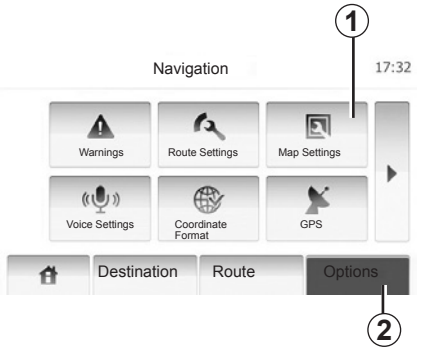

Tap ***2*** and then tap ***1*** to access map setting menu.

Adjusting view mode

This function allows you to switch the map view between a 3D perspective view and a 2D top-down view.

Tap “3D” or “2D”.

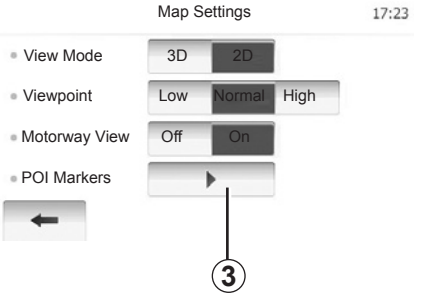

Adjusting viewpoint

This function allows you to adjust the basic zoom and tilt levels to your needs. Three levels are available.

Tap “Low”, “Normal” or “High”.

Motorway View

This function allows you to activate or deactivate motorway view.

Tap “On” or “Off”.

Display points of interest

You can select certain points of interest (visible at 100 m scale) to be displayed on the map.

To access this function directly, Tap ***3*** to display the points of interest on the map:

– Accommodation;
– Airport;
– Automotive;
– Business;
– Cafe or Bar;
– etc.

Tap “On” or “Off” to show or hide the points of interest.

Tap the name of the point of interest to open the list of its subcategories.

MANAGING THE FAVOURITES (1/2)

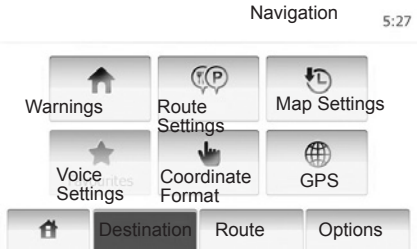

Creating an entry

Tap “Home” > “Destination” to access the destination menu. You have a number of methods available to enter a destination:

– Address: refer to the information on “Entering an address” in the section on “Entering a destination”.

– Point of interest: please refer to the information on “Selecting a point of interest (POI)” in the section entitled “Entering a destination”.

– Address: refer to the information on “Entering an address” in the section on “Entering a destination”.

– History: refer to the information on “Select a destination from the previous destinations” in the section entitled “Entering a destination”.

– Find on Map: refer to the information on “Selecting a destination on the map” in the section on “Entering a destination”.

– Coordinate: refer to the information on “Entering the coordinate of the destination” in the section on “Entering a destination”.

In all cases, once the address is confirmed, the system will locate it on the map. Tap “Options” and then tap “Add to Favourites” to the destination as favourites.

Before saving favourites, you can change the name of the favourite by using keyboard.

MANAGING THE FAVOURITES (2/2)

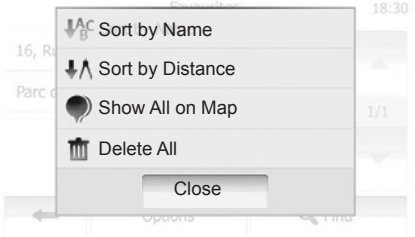

Sorting the list

The result of saved favourites can be sorted by name, distance, and shown all on map. Press “Options”.

Deleting the favourites

Tap the favourite you want to delete. Tap “Options”, “Delete favourite” and confirm by pressing “Delete”.

To delete all favourites, tap “Options” and then tap “Delete All”. Confirm by pressing “Delete All”.

Searching the favourite

This function allows you to search the favourite in the list by its saved name.

Tap “Find” and enter the name of the favourite by using keyboard.

NAVIGATION SETTINGS (1/4)

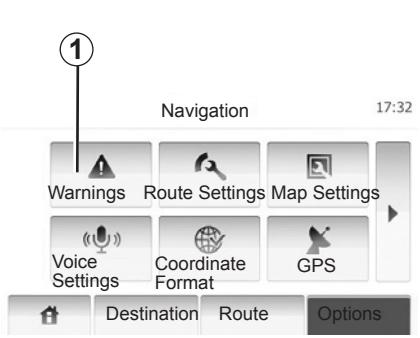

The “Navigation Settings” menu allows you to change the display of the map or navigation parameters.

Warnings

This item allows you to set up warnings. Tap ***1*** to access menu of warnings.

Warn when speeding

Maps may contain information about the speed limits of the road segments. The system is able to warn you if you exceed the current limit. This information may not be available for your region or may not be fully correct for all roads on the map.

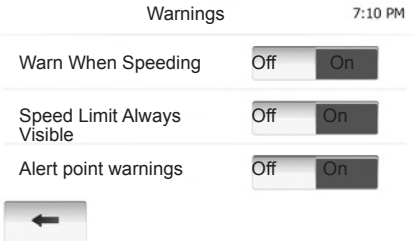

The following alert types are available:

– Audio warning: you receive a non-verbal warning when you exceed the speed limit.

– Visual warning: the current speed limit is shown on the map when you exceed it.

Tap “On” or “Off” to turn on or off the warning.

Speed limit always visible

You can set speed limits always visible. This function can be turned on or off in this menu.

Alert point warnings

When the driver passes an alert point, a warning sign appears on the screen. This function can be turned on or off in this menu.

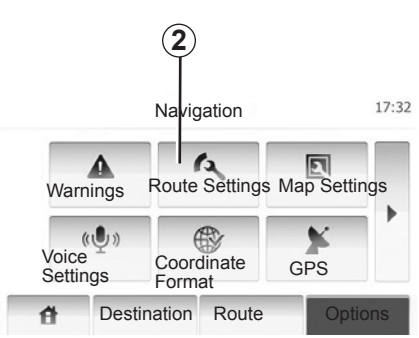

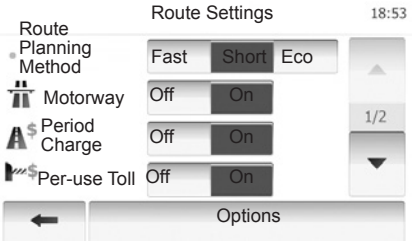

Route settings

This function allows you to set how routes will be calculated.
Tap **2** to access menu of route setting.

Route planning method

This system will offer 3 main route priority criteria:

– Fast: gives a quick route if you can travel at or near the speed limit on all roads;
– Short: gives a short route to minimise the distance to travel;
– Eco: this mode produces a compromise between fast and short routing modes. If you can save a certain distance by travelling for slightly longer time in exchange, it will do just that. The resulting route might be shorter than the fast variant, but not significantly slower.

Motorway
You might need to avoid motorways when you are driving a slow car or you are towing another vehicle.

Period charge
It enables or disables the use of roads for which a special license has to be purchased in order to make use of these roads during a certain period.

Per-use toll
It enables or disables the use of roads for which toll has to be paid to use only once a certain part of a road.

Ferries
It enables or disables the usage of all types of ferries, ships and trains.

Off-road tracks
Authorise or do not authorise the use of off-road tracks.

NAVIGATION SETTINGS (3/4)

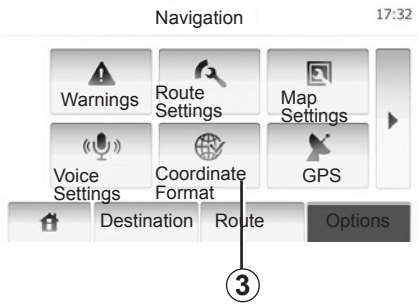

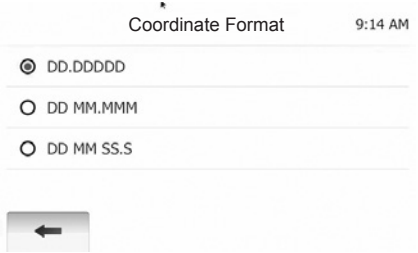

Map settings

Refer to the information in the section on “Map settings”.

Voice settings

This function allows you to change the language of voice guidance.

Data format

This function allows you to change the format of coordinate.

Tap ***3*** to change the format of coordinate.

This system will offer 3 types of format.

NAVIGATION SETTINGS (4/4)

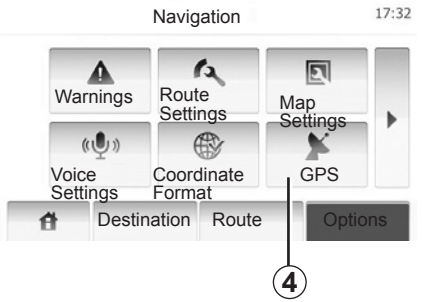

GPS

This function allows you to check the status of GPS satellites.

Tap ***4*** to see the GPS information (screen ***A***).

Ⓐ

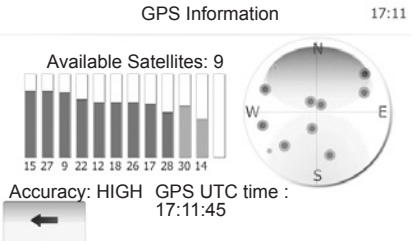

PAIRING, UNPAIRING BLUETOOTH® DEVICES (1/2)

Bluetooth® connection

Check that the Bluetooth® connection is “ON”. To do this, Tap “Home” > “SETTING”, select “Bluetooth”.

Pairing Bluetooth® device

In order to use your hands-free system, you must pair your Bluetooth® mobile to your vehicle before using it for the first time.

Pairing will enable the system to recognise and store a device. You can pair up to 8 devices, but only one can be connected at a time to the hands-free system.

Pairing is carried out directly on your device.

Your hands-free system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

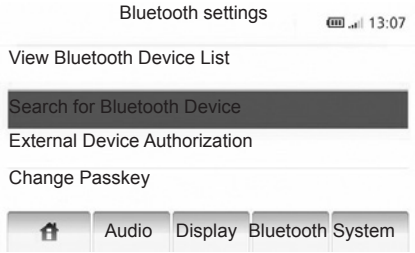

Your multimedia system and device must both be switched on.

Note: when pairing, ensure that no other device already paired is connected to the hands-free system.

Press “Search for Bluetooth Device” or “External Device Authorization” on the screen, then press ***1*** on the phone screen.

Search for Bluetooth peripherals

Press “Search for Bluetooth Device”.

From your device, carry out the procedure in the following order:
– activate the device’s Bluetooth® connection;
– run a search for nearby Bluetooth® devices;
– select your device from the list of peripherals located by Media-Nav;
– enter the Bluetooth® code “0000” on the device keypad.

Note: the Bluetooth® code “0000” is default. You can change this code by pressing “Change Passkey” on the screen.
Note: some devices don’t need to enter the Bluetooth® code.

The device is automatically stored and connected to the vehicle. If pairing fails, repeat these operations.
For more information, refer to your device’s user guide.

PAIRING, UNPAIRING BLUETOOTH® DEVICES (2/2)

Authorise an external peripheral

– Activate the Bluetooth® de votre appareil connection,
– On Media-Nav, press “External Device Authorization”.
– On your device, select “MEDIA-NAV" (Name of hands-free system) from the list.

The device is automatically stored and connected to the vehicle. If pairing fails, repeat these operations.
For more information, refer to your device’s user guide.

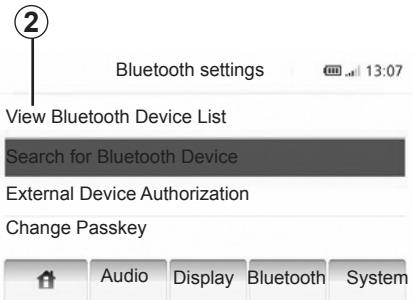

Unpairing Bluetooth® device

Unpairing erases a device from the hands-free system memory.

Tap **2**. Press the waste-bin icon on the device name to be removed from the list. Confirm your choice by selecting “OK”.

You can also delete all device in the list by pressing “Options”, “Delete all” and confirm your choice by selecting “OK”.

CONNECTING, DISCONNECTING BLUETOOTH® DEVICES

Connecting a Bluetooth® device

Your device must be connected to the hands-free system in order to use all its functions.

It is not possible to connect a device to the hands-free system if it has not first been paired. Refer to the information on “Pairing/unpairing Bluetooth® devices”.

Once the system is initiated, the hands-free system will search for the last peripheral connected present in the vicinity (the search may take a minute).

If a call is in progress when the connection is made, it is transferred to the vehicle speakers.

Connection failure

If connection fails, check that:

– the device is configured to accept the system’s connection request;

– your device is switched on;

– your device battery is not flat;

– your device has been paired to the hands-free system;

– the Bluetooth® for your device and the system are activated.

Note: Using your hands-free system for prolonged periods of time will discharge your device’s battery more quickly.

Changing a connected phone

The multimedia system can store up to 8 Bluetooth® devices.

You can connect/disconnect one of the 8 Bluetooth® devices at any time.

Tap “Home” > “SETTING”, select “Bluetooth”. Tap “View Bluetooth Device List”.

Tap the device to be connected and confirm by pressing “OK”

If a call is in progress when the phone is disconnected, the call will automatically switch to your phone.

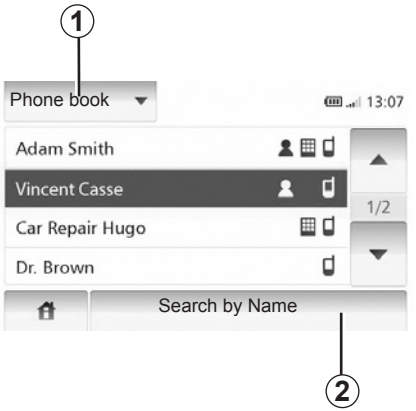

Tap ***1*** to scroll the list and then tap "Phone Book" to access the system's Phone Book.

Using your Phone Book

You can use the Phone Book entries stored on the memory of phone.

After connecting your system and Bluetooth® phone via Bluetooth® wireless technology, the numbers in your device Phone Book are automatically transferred into the system's Phone Book.

Note: system may ask whether to transfer phone's Phone Book into system's Phone Book in certain phones.

Calling a number in the Phone Book

After finding the contact in the Phone Book you want to call, you can select the number and make a call.

Searching the Phone Book contact by alphabet

If there are many contacts in the Phone Book list, it can be useful to display them in the alphabetical order for easier searching.

Tap ***2*** and then enter the name of contact you want to search by using keyboard.

It is recommended that you stop your vehicle before entering a number or searching for a contact.

Dialling a number from the phonebook

Refer to the information on “Calling a number in the phonebook” in the section on “Phonebook”.

It is recommended that you stop your vehicle before entering a number or searching for a contact.

Dialling a number from the call history

You can use the calling list stored on the memory of phone.

After connecting your unit and Bluetooth® phone via Bluetooth® wireless technology, the numbers in your phone’s All Calls, Outgoing Calls, Incoming Calls, and Missed Calls list is transferred automatically into calling list.

Press ***1*** to scroll through the list, then “List of calls”.

Tap ***5*** to access to the list of All Calls.

Tap ***4*** to access the list of Outgoing Calls.

Tap ***3*** to access the list of Incoming Calls.

Tap ***2*** to access the list of Missed Calls.

For each list, the contacts are listed from the most recent to the oldest. Select a contact to make the call.

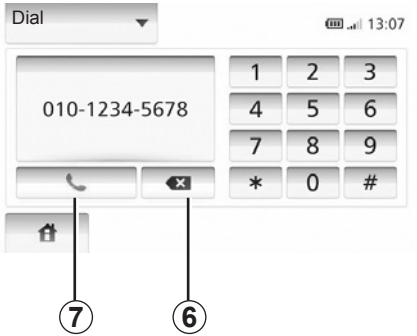

Entering a number

Tap ***1*** to scroll the list and then tap “Dial” to make a call entering a number.

Tap the number buttons to make a call and then tap ***7***

To correct a number tap ***6***. Press and hold ***6*** to delete all the numbers at once.

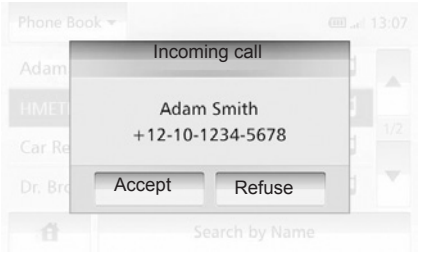

Receiving a call

When receiving a call, the reception screen is displayed with any information available on the caller:

– the name of the contact (if the number is present in the phonebook list);
– the caller's number;
– "Unknown" (if the number cannot be viewed).

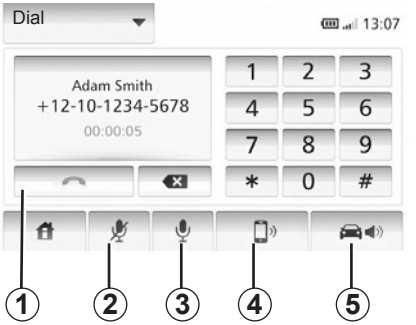

During a call

During a call you can:

– switch the microphone on/off by pressing ***2*** or ***3***;
– hang up by pressing ***1***;
– hear sound through the phone speaker by pressing ***4***;
– hear sound through the vehicle speaker by pressing ***5***.

SYSTEM SETTINGS (1/2)

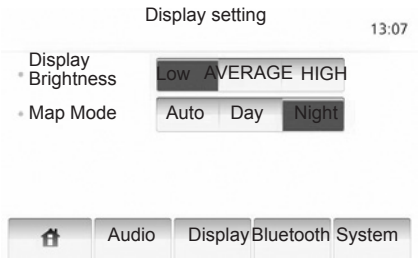

To access the system parameters:

– Tap “Home”, “SETTING”;

– tap the menu on the bottom of the screen;

– select an item.

Display setting

Display brightness

You can set the brightness of the screen.

Set the display brightness to Low, AVERAGE (Medium) or HIGH.

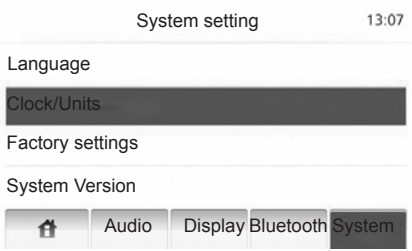

Map mode

To improve the visibility of the map screen between day and night, you can change the combination of the colours of the map.

– Auto : the map screen is displayed by GPS. The switch to daytime or nighttime running lights is automatic, depending on whether the headlights are on.

– Day : the map screen is always displayed with bright colours.

– Night : the map screen is always displayed using darker colours.

System setting

Language

This function allows you to change the language used in the system and voice guidance language.

Clock

This function allows you to set the time format between the “12h” and “24h”.

Note: clock is configured automatically by the GPS and it is not possible to change it manually. You will need the maps for the country in which you are currently located to get local time.

Units

This function allows you to set the unit of distance displayed on your navigation system. You can change the unit between the “km” and “mls”.

SYSTEM SETTINGS (2/2)

Factory Setting

This function allows you to initialize various settings to the default settings.

– All: Initializes all the settings to the default settings.
– Phone: Initializes all the settings related with phone.
– Navigation: Initializes all the settings related with navigation.
– Audio/Media/Radio: Initializes all the settings related with Audio/Media/Radio.

System Version

This function allows you to check the version of system.

Audio setting

Please refer to the “Sound settings” section.

Bluetooth setting

Refer to the section entitled “Pairing/unpairing Bluetooth® devices”.

UPDATING THE SYSTEM (1/4)

By inserting your USB key into a computer that is connected to the internet, you can:

– update your map content;

– update the system;

– purchase new maps;

– upgrade to premium POI content.

Installing the software

Install the Naviextras Toolbox in a few clicks on your computer. The Toolbox can be downloaded from:

– https://renault.naviextras.com/toolbox

– https://dacia.naviextras.com/toolbox

After downloading the install file from website, simply double-click the file to start the instrallation.

Follow the instructions shown on the screen.

Creating an internet account

To log in, click the “Not logged in” icon in the toolbar at the top of the page or click the Login button in the Toolbox main screen. In case you are not registered on Naviextras.com website, you can easily do that from Toolbox by clicking on the “Register” button on the login page.

Latest map guarantee

Once your new vehicle has been delivered, you will have a maximum of 90 days in which to update the map free of charge. Once this time has elapsed, you will need to pay for updates.

The screens shown in the user manual are not contractual.

Registering the system with the Toolbox

To register your navigation system to your user profile, first you have to take an empty USB key to the navigation system.

Note: to insert the USB key, please refer to the section on the “The navigation system” in your notice, and specifically the information on “Inserting the USB memory”.

Note: the key USB is not supplied with the system.

Note: at least a 4GB storage size of USB key is recommended.

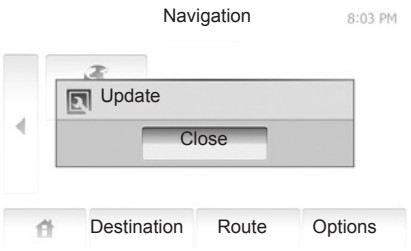

When the USB key is inserted into the navigation system’s USB socket, you have to select “NAVI” > “Options” > “Map update” > “Options” > “Update” button on the system menu.

This creates a fingerprint of your navigation system to the USB key which is going to be used by the Toolbox to register your system to your account and to let the Toolbox determine which updates are available for your system.

Connect your USB key to your computer (the computer must already be connected to the internet). When your system is successfully connected and the Toolbox finds it in the list of supported systems, the system (or software) name will appear at the top of the Toolbox window.

If you have followed the instructions, and successfully connected your USB key and then logged in, then your system is already registered into your user profile.

Downloading updates to the USB key

If you purchased any free or pay contents, please click on the updates button in the menu bar on the left side of Toolbox.

The updates button will open a screen which shows all available updates, including:

– items that you have purchased but not yet installed (updates or extras);

– free updates and extras that you added to the installation queue from the Catalogue;

– system updates (if a newer version available);

– and special free updates.

The list shows all available updates by region in a list and on a world map.

By default, all items belonging to all regions are selected for installation. If you decide to skip a region for now, uncheck the checkbox at the beginning of its table row. After reviewing the table, click Install at the bottom of the screen to start the installation process.

The Toolbox will start downloading and installing the selected updates. Please wait until you receive a message that the operation is completed.

The Toolbox warns you if the selected items exceed the maximum storage of navigation system. In this case, you can select which items can be installed or removed in the system so that it does not exceed the storage limit.

Even if items are removed in the system, you still have ownership of items and can install them later for free.

Please neither remove the USB key from the system, nor shut the system down while update is in progress.

In certain countries it is illegal to download and activate the speed camera warnings and this could lead to prosecution.

UPDATING THE SYSTEM (4/4)

Updating the system and map

When the process of downloading is done, the USB key can be removed from the computer. Bring it back to the navigation system and insert the USB key to the system's USB socket.

When the system is turned on, it automatically identifies the available updates on the USB key, and offers to update the system or map from the updates found on the USB key.

Note: downloading and installing a system update is only possible if there is a newer version available.

Ⓐ

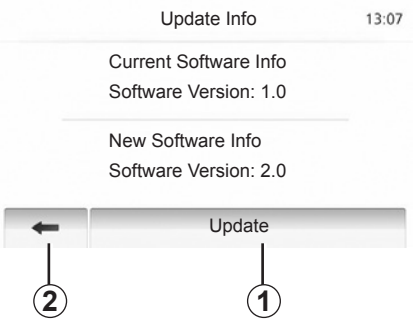

– Screen ***A*** is displayed automatically once the USB key connected.
– Tap ***1*** to start update.
Tap ***2*** to go back to previous screen.

The update procedure starts automatically. Do not use any of the system functions during the update procedure.

When the update is completed, the navigation system restarts with all new and up to date functionality.

The system might be restarted automatically during the update process. Please wait to display the radio screen.

If the update is accidentally interrupted, restart the process from the beginning.

OPERATING FAULTS (1/2)

System		
Description	**Causes**	**Solutions**
No image is displayed.	The screen is on standby.	Ensure that the screen is not on standby.
No sound can be heard.	The volume is set to minimum or mute.	Increase the volume or deactivate mute.
No sound comes from the left, right, front or rear speakers.	The balance or fader settings are incorrect.	Adjust the sound balance or fader correctly.

Navigation		
Description	**Causes**	**Solutions**
The location of the vehicle on the screen does not correspond to its actual location.	Incorrect positioning of the vehicle caused by GPS reception.	Move the vehicle until reception of the GPS signal is improved.
The directions on the screen do not correspond to the actual road.	The version of sytem is out of date.	Obtain the latest version of the system.
Certain items on the menu are not available.	Depending on the current command, some items will be unavailable.	

OPERATING FAULTS (2/2)

Navigation		
Description	**Causes**	**Solutions**
Voice guidance is unavailable.	The navigation system does not include the intersection. Voice guidance is deactivated.	Increase the volume. Ensure voice guidance is activated.
The directions of the voice guidance do not correspond to your exact location.	The voice guidance may vary according to the environment.	Drive according to the actual conditions.
The suggested route does not start or end at the required destination.	The destination is not yet recognised by the system.	Enter a road near to the required destination.

Phone		
Description	**Causes**	**Solutions**
No sounds or ringtone can be heard.	The mobile phone is not connected to the system. The volume is set to minimum or mute.	Ensure that the mobile phone is connected to the system. Increase the volume or deactivate mute.
Impossible to make a call.	The mobile phone is not connected to the system. The phone keypad has been locked.	Ensure that the mobile phone is connected to the system. Unlock the phone keypad.

ALPHABETICAL INDEX (1/2)

A
address book ..... GB.28, GB.37 – GB.38
answering a call GB.48
ARTIST GB.18
AUX ..... GB.17 → GB.19
auxiliary source ..... GB.17 → GB.19

B
BALANCE GB.20
BASS GB.20
Bluetooth connection GB.45
Bluetooth® ..... GB.43, GB.45 – GB.46
Bluetooth® portable audio player
pairing GB.18
unpairing GB.18

C
call GB.47
call volume GB.13
clock GB.49
display GB.49
confirm a destination ..... GB.29 – GB.30
connect a telephone GB.45
contacts list GB.46

D
destination ..... GB.25 → GB.30, GB.37 – GB.38
detailed route ..... GB.31 → GB.35
detour ..... GB.31 → GB.35
dialling GB.47
dialling a number GB.46

E
entering an address GB.25

F
FADER GB.20
fast winding GB.17
favourite number GB.46
FM/LW/MW bandwidths ..... GB.14 → GB.16

G
GPS
receiver GB.21, GB.42
reception GB.21
guidance
activation GB.31
cancellation GB.35
map ..... GB.31 → GB.36
voice ..... GB.31 → GB.35

J
Jack socket GB.19

L
LIST mode GB.14

M
MANU mode GB.14
map
digitised map GB.21
display GB.22, GB.36
scale GB.22
settings GB.36, GB.39
map navigation GB.36
mute GB.13

O
operating faults ..... GB.55 – GB.56
operation GB.10

ALPHABETICAL INDEX (2/2)

P

pairing a telephone GB.43
POI ..... GB.26 – GB.27, GB.36
point of interest ..... GB.26 – GB.27, GB.36
PRESET mode ..... GB.14 → GB.16

R

range of wavelengths ..... GB.14 → GB.16
RDS GB.5, GB.16
receiving a call GB.48

S

screen
- monitor GB.10
- navigation display ..... GB.31 → GB.35
- navigation screen ..... GB.31 → GB.36
- settings GB.36

setting GB.20
settings ..... GB.40 → GB.42, GB.49 – GB.50
- audio GB.20
- balance GB.20
- brightness GB.49
- fader GB.20
- navigation ..... GB.40 → GB.42

storing a radio station ..... GB.14 → GB.16
switching off GB.10
system
- update ..... GB.51 → GB.54

T

3D/2D mode GB.31
treble GB.20

U

unpairing a telephone GB.44
USB ..... GB.51 → GB.54
USB key ..... GB.51 → GB.54
USB socket ..... GB.18, GB.51 → GB.54

V

volume GB.13
volume: adapted to speed GB.13

W

WMA GB.17